



Electric Chain Hoist

Operation Manual & Part List

Series:

- ☐ 100&100D
- ☐ 200
- ☐ 300&300D
- ☐ 400&400D



CHENG DAY MACHINERY WORKS CO., LTD.

SAFETY-IMPORTANT

The use of any hoist and trolley presents some risk of personal injury or property damage.

That risk is greatly increased if proper instructions and warnings are not followed. Before using this hoist, each user should become thoroughly familiar with all warnings, instructions and recommendations herein.



THIS SYMBOL POINTS OUT IMPORTANT SAFETY INSTRUCTIONS WHICH IF NOT FOLLOWED COULD ENDANGER THE PERSONAL SAFETY AND/OR PROPERTY OF YOURSELF AND OTHERS. READ AND FOLLOW ALL INSTRUCTIONS IN THIS MANUAL AND ANY PROVIDED WITH THE EQUIPMENT BEFORE ATTEMPTING TO OPERATE YOUR ELECTRIC CHAIN HOIST.



CONTENTS

Safety-Important	1
1.Foreword	3
2.Main Specification	4
2.1 Specification	4
2.2 Mechanical Classification (Grade) and Life	5
2.3 Safety Device	6
2.4 Main Specification and Dimensions of Hook Suspension Type Hoist	7
2.5 Optional Trolley Accessory	8
3.Safety Rules	10
4.Installation	12
4.1 Unpacking Information	12
4.2 Voltage	13
4.3 Installation	13
5.Operation	15
6.Maintenance and Inspection	16
6.1 Maintenance	16
6.2 Inspection	16
7.Troubleshooting	20
7.1 Wiring Diagrams	20
7.2 Troubleshooting and Remedial Action	25
8.Drawings and Parts List	26
9.CE Attestation of Conformity	58
10.Oil Quality Table.....	59

1. FOREWORD

This manual contains important information to help you properly install, operate and maintain the U-MEGA electric chain hoist for maximum performance, economy and safety.

Please study its contents thoroughly before putting the electric chain hoist into operation.

By Practicing correct operation, procedures and by carrying out the preventative maintenance Recommendations, you will be assured of dependable service. In order to help us to supply Correct spare parts quickly, please always specify,

(1) Hoist model

(2) Serial number

(3) Part number, plus the description.

We will have your trust of Cheng Day's long term satisfactory service as our belief.

Should you have any queries, please contact:



(Please ask for a company's stamp from your local agent)

2. MAIN SPECIFICATIONS

2.1 Specifications

The following specifications are common to all electric chain hoists.

Table 2-1 Specifications

Item		Detail	
Working temperature range (°C)		-5 to +40	
Working humidity range (%)		85 or less	
Protection	Hoist	IP 42	
	Push button	IP 65	
Electric power supply		Three Phase, 220V~600V, 50/60 Hz	
Noise Level (dB)	Single speed hoist	81	
	Dual speed hoist	81	
Chain Size	Wll (working load limit) (t)	Nominal diameter (mm)	Pitch (mm)
	0.5T, 1T, 2T, 3T	7.1	20.2

Remarks: (1) Contact an authorized dealer for information on using the hoist over the working temperature or humidity range.

(2) For dimensions and other details, refer to the latest catalogue.

(3) Noise levels were measured at a distance of 1m horizontally from the hoists during normal operation.

2.2 Mechanical Classification (Grade) and Life


Safety and life for electric chain hoists are guaranteed only when the said equipment is operated in accordance with the prescribed grade.

Electric chain hoists have been designed for grade 2m except UH-200-series 1Dm in the FEM regulations (FEM 9.511). Details are provided in Table 2-2.


Average daily operating time and total operating time are determined by load distribution.

Table 2-2 Mechanical classifications


Load Spectrum (Load distribution)	Definitions	Cubic mean value	1Dm	2m
			Average daily operating time (h)	Average daily operating time (h)
			Total operating time (h)	Total operating time (h)
1 (light)	Mechanisms or parts thereof, usually subject to very small loads and in exceptional cases only to maximum loads.	$k \leq 0.50$	0.25-0.5	4-8
			800	12500
2 (medium)	Mechanisms or parts thereof, usually subject to small loads but rather often to maximum loads.	$0.50 < k \leq 0.63$	0.12-0.25	2-4
			400	6300
3 (heavy)	Mechanisms or parts thereof, usually subject to medium loads but frequently to maximum loads.	$0.63 < k \leq 0.80$	≤ 0.12	1-2
			200	3200
4 (very heavy)	Mechanisms or parts thereof, usually subject to maximum or almost maximum loads.	$0.80 < k \leq 1.00$	-	0.5-1
			-	1600

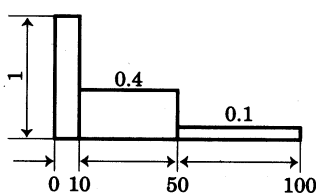


% operating time
Load spectrum 1

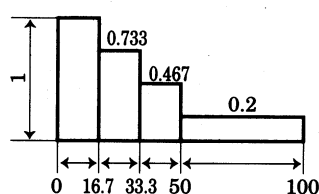

% operating time
Load spectrum 2

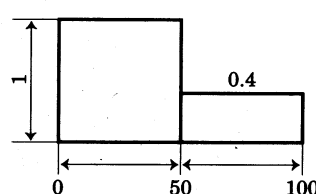

% operating time
Load spectrum 3

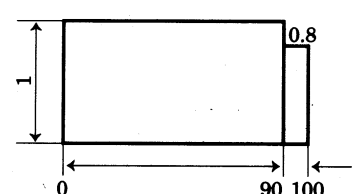

% operating time
Load spectrum 4

2.3 Safety Devices

(1) Motor brake

“Electro-Magnetic Brake” is of a unique design in its field. It features simultaneous motor braking upon switching off power even under full load condition.

(2) Mechanical load brake

The mechanical load brake can hold a full capacity load independent of motor brake. This brake assures that load does not accelerate while being lowered.

(3) Hook and hook latch

The hook is drop-forged from high tensile steel and heat treated for strength and Toughness. The bottom hook is capable of 360° swivel and fitted with safety latch to ensure safe lifting.

(4) Phase error relay

The Phase error relay circuit has been exclusively developed to prevent motor from running when the phase are incorrectly connected.


(5) Limit Switches (except 100 series)

Upper and lower limit switches are fitted for switching off power automatically in case of over lifting or over lowering.

(6) Emergency stop device (optional)


This button is used to stop the hoist in an emergency situation. It is a red, mushroom type button, located at the uppermost position of the pendant. When pressed, power to the equipment is switched off and the button locks automatically.

Turning it to the right will release the lock and enable re-starting. (Illust. 1)

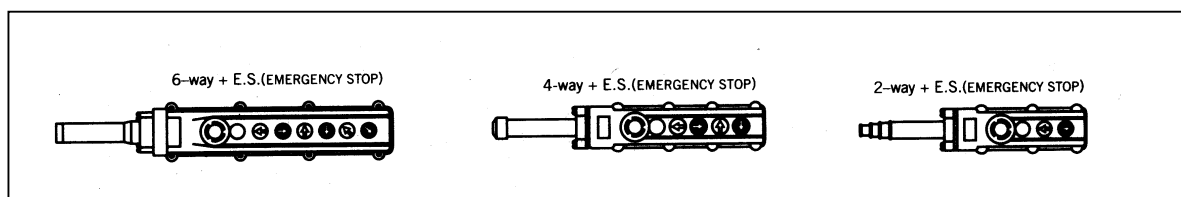


Illust. 1

2.4 Main Specifications and Dimensions of Hook Suspension Type Hoist:

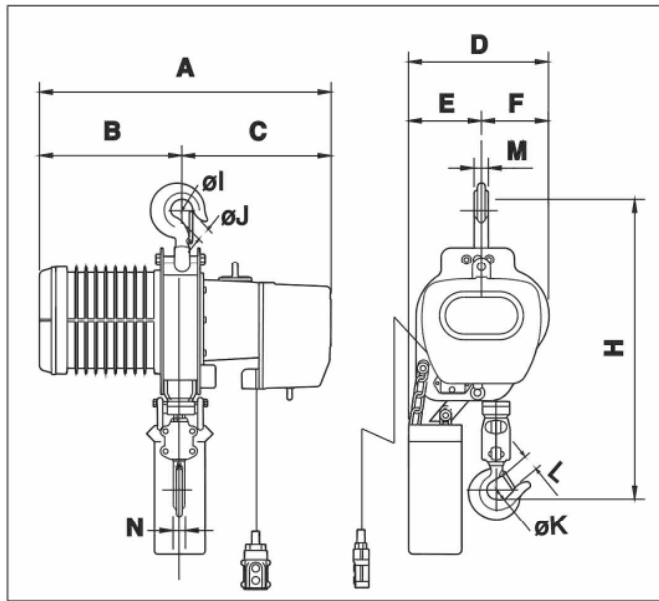

100 SERIES

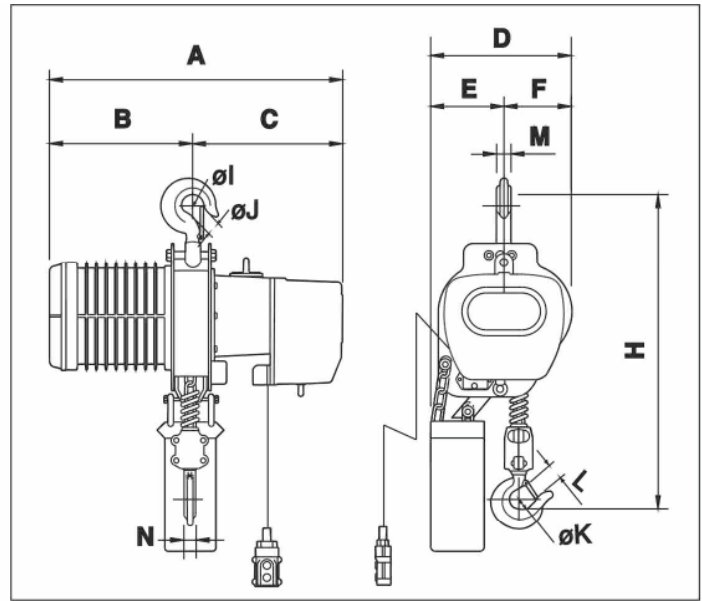

200~400 SERIES

■ SPECIFICATIONS

Model	Nominal Capacity (ton)	Height of Lift (m)	Load Chain (mm)	Lifting Speed (m/min)				Motor Power (kw)	Power Supply	Duty Rating (%)	Load Chain Fall Lines	Test Load (ton)	N.W./G.W. (kgs)
				50HZ		60HZ							
				Single Speed	Dual Speed	Single Speed	Dual Speed						
UH(D)-105	0.5	3(6)	ø7.1	6.7	(6.7 / 2.2)	8.0	(8.0 / 2.7)	1.5 (1.8)	3Phase 220V - 600V	40	1	0.625	50.5 / 53
UH(D)-110	1			4.7	(4.7 / 1.6)	5.6	5.6 / 1.8	1.8			1	1.25	50.5 / 53
UH(D)-120	2			2.3	2.3 / 0.8	2.8	2.8 / 1.0	1.8			2	2.5	60.5 / 63
UH-205	0.5			6.7	-	8.0	-	1.8	1Phase 220V,230V	15	1	0.625	55 / 58.5
UH-210	1			4.7	-	5.6	-				1	1.25	55 / 58.5
UH-220	2			2.3	-	2.8	-				2	2.5	65 / 67
UH-205	0.5			5.6	-	6.7	-	1.8	1Phase 110V,115V	15	1	0.625	55 / 58.5
UH-210	1			3.9	-	4.7	-				1	1.25	55 / 58.5
UH-220	2			2	-	2.3	-				2	2.5	64.5 / 67
UH(D)-305	0.5			6.7	(6.7 / 2.2)	8.0	(8.0 / 2.7)	1.5 (1.8)	3Phase 220V - 600V	40	1	0.625	50.5 / 53
UH(D)-310	1			4.7	(4.7 / 1.6)	5.6	(5.6 / 1.8)	1.8			1	1.25	50.5 / 53
UH(D)-320	2			2.3	2.3 / 0.8	2.8	2.8 / 1.0	1.8			2	2.5	61 / 64
UH(D)-330	3			1.5	1.5 / 0.5	1.8	1.8 / 0.6	1.8			3	3.75	73 / 96
UH(D)-405	0.5			(9.2)	(9.2 / 3.1)	(11.0)	(11.0 / 3.7)	1.5 (1.8)			1	0.625	50.5 / 53
UH(D)-410	1			(6.7)	(6.7 / 2.2)	(8.0)	(8.0 / 2.7)	1.8			1	1.25	50.5 / 53
UH(D)-420	2			3.3	3.3 / 1.1	4.0	4.0 / 1.3	1.8			2	2.5	61 / 64
UH(D)-430	3			2.2	2.2 / 0.7	2.6	2.6 / 0.9	1.8			3	3.75	73 / 96


■ DIMENSIONS (mm)

Model	Nominal Capacity (ton)	Fig.	H	A		B		C	D	E	F	I	J	K	L	M	N
				Single Speed	Dual Speed	Single Speed	Dual Speed										
UH(D)-105	0.5	1	560	505	505	245	245	260	240	115	125	40	28	40	28	23	23
UH(D)-110	1	1	560					260	240	115	125	40	28	40	28	23	23
UH(D)-120	2	1	710					260	240	175	65	46	36	46	36	31	31
UH-205	0.5	2	595	548	-	288	-	260	240	115	125	40	28	40	28	23	23
UH-210	1	2	595					260	240	115	125	40	28	40	28	23	23
UH-220	2	2	745					260	240	175	65	46	36	46	36	31	31
UH(D)-305	0.5	2	595	505	548	245	288	260	240	115	125	40	28	40	28	23	23
UH(D)-310	1	2	595					260	240	115	125	40	28	40	28	23	23
UH(D)-320	2	2	745					260	240	175	65	46	36	46	36	31	31
UH(D)-330	3	2	880	505	548	245	288	260	280	175	105	52	43	52	43	34	34
UH(D)-405	0.5	2	595					260	240	115	125	40	28	40	28	23	23
UH(D)-410	1	2	595					260	240	115	125	40	28	40	28	23	23
UH(D)-420	2	2	745	505	548	245	288	260	240	175	65	46	36	46	36	31	31
UH(D)-430	3	2	880					260	280	175	105	52	43	52	43	34	34

2.5 Optional Trolley Accessory

TROLLEYS


● PLAIN TROLLEY

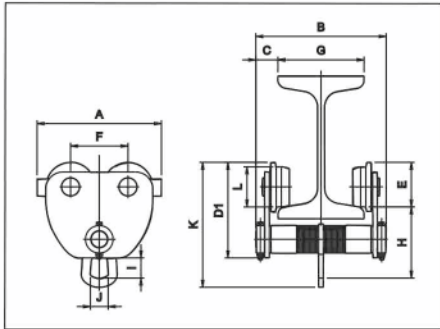

DIMENSIONS(mm) PT

Model	Capacity (ton)	A	B	C	D ₁	E	F	H	I	J	K	L	Flange Width G	N.W. (kgs)	Min radius of curve (m)
PT-050	0.5	194	220	35	151	69	89	115	33	28	198	60	50~150	6.4	1.0
PT-100	1	217	227	39	167	78	100	124	35	31	218	70	75~150	10.6	1.0
PT-200	2	247	260	43	207	91	116	171	55	56	284	80	100~175	16.8	1.3
PT-300	3	270	300	50	239	103	130	215	79	60	353	90	100~200	25.8	1.5


● GEARED TROLLEY

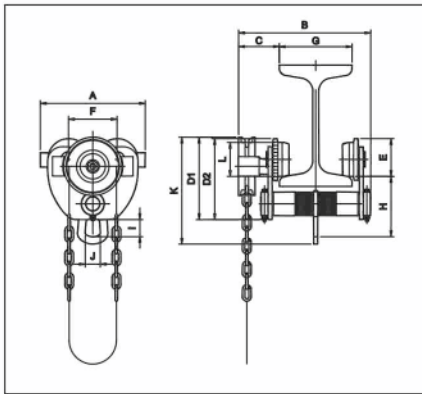

DIMENSIONS(mm) GT

Model	Capacity (ton)	A	B	C	D ₁	D ₂	E	F	H	I	J	K	L	Flange Width G	N.W. (kgs)	Min radius of curve (m)
GT-050	0.5	194	266	81	150	151	69	89	115	33	28	198	60	50~150	8.8	1.0
GT-100	1	217	273	85	170	167	78	100	124	35	31	221	70	75~150	13.5	1.0
GT-200	2	247	309	91	224	207	91	116	171	55	56	301	80	100~175	19.8	1.3
GT-300	3	270	346	96	241	239	103	130	215	79	60	355	90	100~200	30.3	1.5

● MONORAIL MOTORIZED TROLLEY

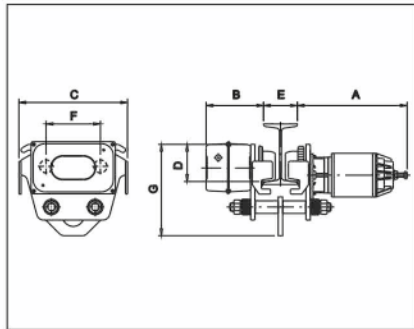


DIMENSIONS / SPECIFICATION (mm)

Model	Capacity (ton)	A	B	C	D	E	F	G	Speed (m/min)		Motor (kw)	Pole (P)	Min radius of curve (m)	N.W. (kg)
									50Hz	60Hz				
UT-310	1	328	173	294	98	75-125	149	246	20	24, 16	0.25, 0.17	4, 6	1.3	40
UTD-310									20/7	24/8	0.25/0.08	4/12		
UT-320	2	328	173	322	111	100-150	161	272	20	24, 16	0.25, 0.17	4, 6	1.5	45
UTD-320									20/7	24/8	0.25/0.08	4/12		
UT-330	3	368	180	356	117	125-175	172	297	20	24, 16	0.6, 0.4	4, 6	1.8	65
UTD-330									20/7	24/8	0.6/0.2	4/12		

UT-310~350:50HZ uses 4P motor ; 60HZ uses 4P or 6P motor.
(Please specify as ordering 6P motor.)

● MOTOR SADDLE TROLLEY

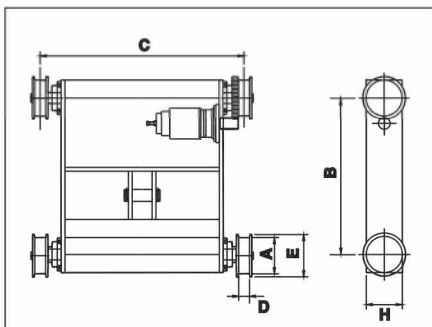


DIMENSIONS / SPECIFICATIONS (mm)

Model	Capacity (ton)	Speed (m/min)		A	B	C	D	E	H	Motor (kw)	Pole (P)	N.W. (kg)
		50HZ	60HZ									
UST-310	1	20	19	120	580	700	40	147	122.5	0.25	4	94
USTD-310		20/6.7	19/6.3							0.25/0.08	4 / 12	
UST-320	2	20	19	120	580	700	40	147	122.5	0.25	4	94
USTD-320		20/6.7	19/6.3							0.25/0.08	4 / 12	
UST-330	3	18	22	150	650	850	45	178	155	0.4	4	182
USTD-330		18 / 6	22/7.3							0.4/0.13	4 / 12	

UST-310 — 50HZ with pinion of M3.5x15T
UST-320 — 60HZ with pinion of M3.5x12T
UST-330 — 50HZ / 60HZ with pinion of M3.5x13T


■ Hoist with trolleys

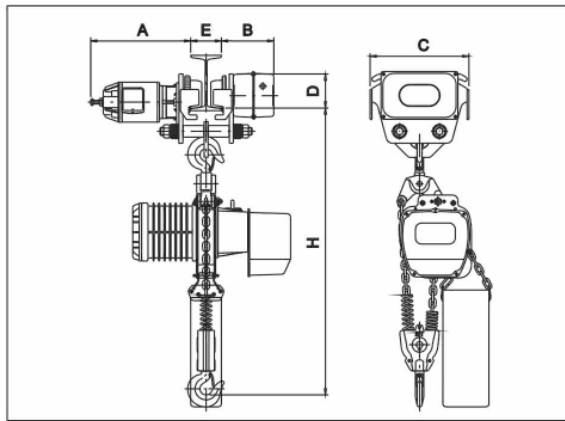

100~400 series
Hoist with trolley's dimension (mm)

Model	Capacity (ton)	H	A	B	C	D	Flange Width (E)
UHT- 105,110 205,210 305,310 405,410	0.5,1	705	328	173	294	98	75~125
UHT- 120 220 320 420	2	935	328	173	322	111	100~150
UHT- 330 430	3	1030	368	180	356	117	125~175

■ LOW HEADROOM

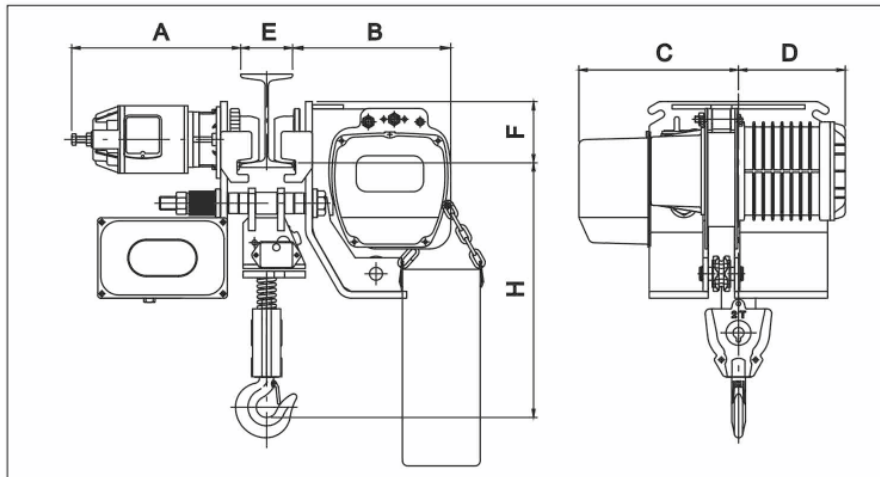

100,300,400 SERIES LOW HEADROOM UNIT (mm)

Model	Capacity (ton)	Dimension (mm)						F	Hoisting			Traversing		
		H	A	B	C	D	E		Speed(m/min)		Motor kw pole	Speed(m/min)		Motor kw pole
ULH-105	0.5	440	327	307	278	241	75-125	112	6.7	8.0	1.5,4P	20	24	0.25, 4P
ULHD-105						286			6.7/2.2	8.0/2.7	1.8/0.6, 4/12P	20/7	24/8	0.25/0.08, 4/12P
ULH-110	1	440	327	307	278	241	75-125	112	4.7	5.6	1.5,4P	20	24	0.25, 4P
ULHD-110						286			4.7/1.6	5.6/1.8	1.8/0.6, 4/12P	20/7	24/8	0.25/0.08, 4/12P
ULH-120	2	520	330	310	311	208	100-150	118	2.3	2.8	1.8,4P	20	24	0.25, 4P
ULHD-120						253			2.3/0.8	2.8/1.0	1.8/0.6, 4/12P	20/7	24/8	0.25/0.08, 4/12P
ULH-130	3	593	366	315	343	208	125-175	143	1.5	1.8	1.8,4P	20	24	0.6, 4P
ULHD-130						221			1.5/0.5	1.8/0.6	1.8/0.6, 4/12P	20/7	24/8	0.6/0.2, 4/12P
ULH-305	0.5	440	327	307	278	241	75-125	112	6.7	8.0	1.5,4P	20	24	0.25, 4P
ULHD-305						286			6.7/2.2	8.0/2.7	1.8/0.6, 4/12P	20/7	24/8	0.25/0.08, 4/12P
ULH-310	1	440	327	307	278	241	75-125	112	4.7	5.6	1.5,4P	20	24	0.25, 4P
ULHD-310						286			4.7/1.6	5.6/1.8	1.8/0.6, 4/12P	20/7	24/8	0.25/0.08, 4/12P
ULH-320	2	520	330	310	311	208	100-150	118	2.3	2.8	1.8,4P	20	24	0.25, 4P
ULHD-320						253			2.3/0.8	2.8/1.0	1.8/0.6, 4/12P	20/7	24/8	0.25/0.08, 4/12P
ULH-330	3	593	366	315	343	208	125-175	143	1.5	1.8	1.8,4P	20	24	0.6, 4P
ULHD-330						221			1.5/0.5	1.8/0.6	1.8/0.6, 4/12P	20/7	24/8	0.6/0.2, 4/12P
ULH-405	0.5	440	327	307	278	241	75-125	112	9.2	11	1.8,4P	20	24	0.25, 4P
ULHD-405						286			9.2/3.1	11/3.7	1.8/0.6, 4/12P	20/7	24/8	0.25/0.08, 4/12P
ULH-410	1	440	327	307	278	241	75-125	112	6.7	8.0	1.8,4P	20	24	0.25, 4P
ULHD-410						286			6.7/2.2	8.0/2.7		20/7	24/8	0.25/0.08, 4/12P
ULH-420	2	520	330	310	311	208	100-150	118	3.3	4.0	1.8,4P	20	24	0.25, 4P
ULHD-420						253			3.3/1.1	4.0/1.3	1.8/0.6, 4/12P	20/7	24/8	0.25/0.08, 4/12P
ULH-430	3	593	366	315	343	208	125-175	143	2.2	2.6	1.8,4P	20	24	0.6, 4P
ULHD-430						221			2.2/0.7	2.6/0.9	1.8/0.6, 4/12P	20/7	24/8	0.6/0.2, 4/12P

※100 series of products are only applicable for Europe.

※Maximum lifting height : 6M

3. SAFETY RULES

DANGER

The hoist herein is not designed for, and should not be used for, lifting, supporting, or transporting personnel. Any modifications to upgrade, re-rate, or otherwise alter the hoist equipment must be authorized by either the original manufacturer or a qualified professional engineer.

(1) Only the trained personnel are allowed to operate the hoist.


DANGER

Do not use the hoist in explosive atmosphere.

(3) Prior to each lifting operation, it is essential to make sure that:

(a) the correct lifting sling is being used.


(b) the lifting sling is located in the hook as shown below (Illust. 2) and that a safety latch has been fitted.

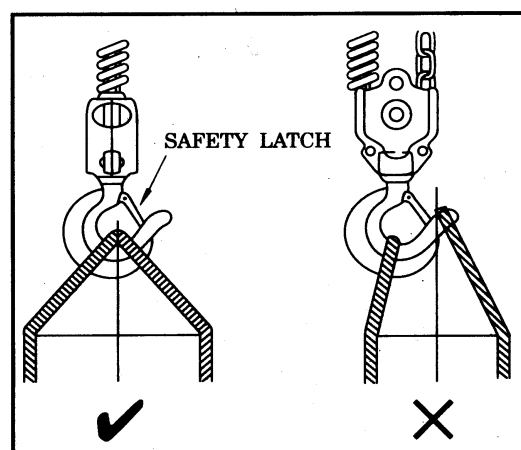


Illust. 2

(c) the object to be hoisted is well secured for direct lifting (a proper lifting frame or apparatus is strongly recommended for direct lifting .)

- (4) Firm and steady button operation is required, never push the button switch intermittently.
- (5) Always avoid excessive inching operation.
- (6) Always make sure the hoist motor completely stops before reversing.
- (7) Always leave the push button switch cable and bottom hook vertically static after completion of operation, never leave them at any position which may cause swing or slip.
- (8) Sling must be applied to load evenly and centrally to ensure correct balance. Never lift any object which is insecure or out of balance.
- (9) Never use hoist to end or side pull a load. (Illust. 3)
- (10) Never wrap around and hook back the load chain as a sling to lift a load. (Illust. 4)

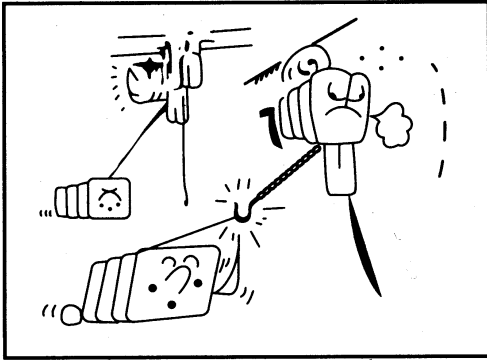

Illust. 3

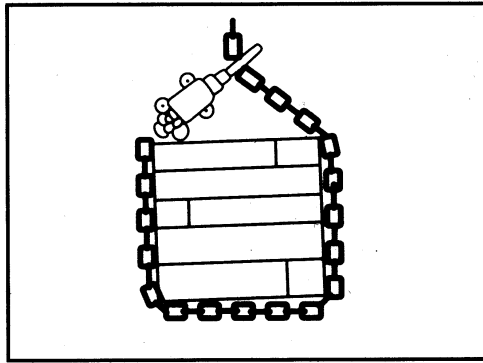

Illust. 4

(11)


! WARNING

Do not use the hoist chain as a welding electrode.

(12)

! DANGER

Never stand under a raised load (Illust. 5)

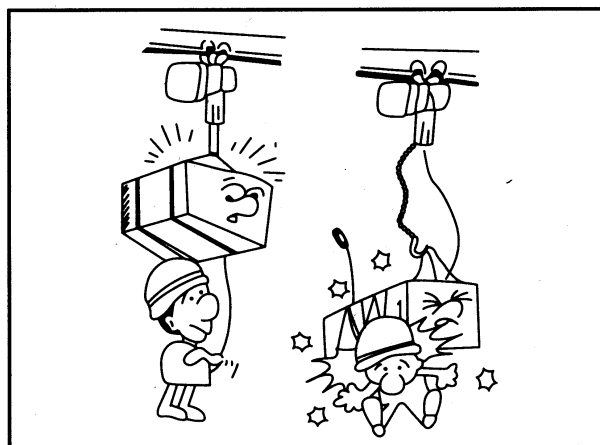

Illust. 5

(13) Lifting must always be personally attended, never leave a raised load unattended.

(14) Over-capacity-load lifting is hazardous and should not be undertaken.

(15) Never lift a load when the load chain is twisted.

(16) Regularly inspect and check the condition of load chain. Do not operate with damaged chain.

(17) Bucket Specifications:

Key No.	Bucket No.	Chain Size (mm)	Chain Length (m)	Bucket Size(mm)	Material
200772	2	7.1	5.6-8.9	150×100×380L	Canvas
200773	3	7.1	9.0-13.5	150×100×470L	Canvas
200774	4	7.1	13.6-20.5	150×100×560L	Canvas
200775	5-1	7.1	18.5	210×140×465×t2	Steel
200776	5-2	7.1	18.6-25.5	210×160×545×t2	Steel
200777	5-3	7.1	25.6-30.5	210×160×665×t2	Steel
200778	5-4	7.1	30.6-40.5	210×170×815×t2	Steel
200779	5-5	7.1	40.6-50.5	210×170×975×t2	Steel
200780	5-6	7.1	50.5-60.5	210×180×1135×t2	Steel

※ Remember to change bucket if the length of chain increased.

4. INSTALLATION

4.1 Unpacking Information

After removing the hoist from its packing box, carefully inspect the external condition of the electrical cables, contactor, gear box and motor casing for damage.

Check and ensure that these items are present.

Each hoist is supplied as standard with the following accessories.

1. Chain bucket	1 set
2. Power cable	3 meters
3. Push button control switch	1 piece

Table. 4-1

4.2 Voltage

⚠ CAUTION

If power supply deviates from standard by more than $\pm 10\%$ abnormal operation or damage to the motor may result. It is imperative to ensure correct voltage supply before commencing operation.

4.3 Installation


⚠ WARNING

Connection to power supply before installation procedures having been completed is strictly prohibited.

(1) Prior to installation check and ensure that the top hook assembly is securely attached to the hoist by means of the lock bolt.

NOTE: If the hoist is to be suspended from an electric trolley, assembly may be eased by firstly removing the top hook, just attaching hoist top hook to the trolley load plate.


(2) Assemble chain bucket.

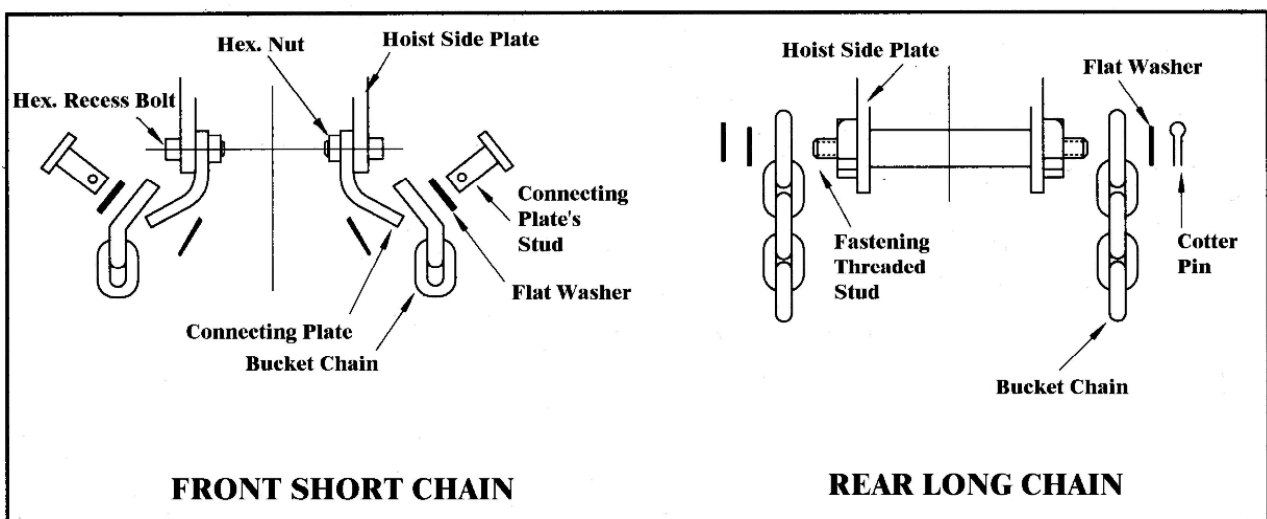

Illust.6

(3) Connect power supply to hoist and operate the push button switch.

This operation must be carried out by a trained person.

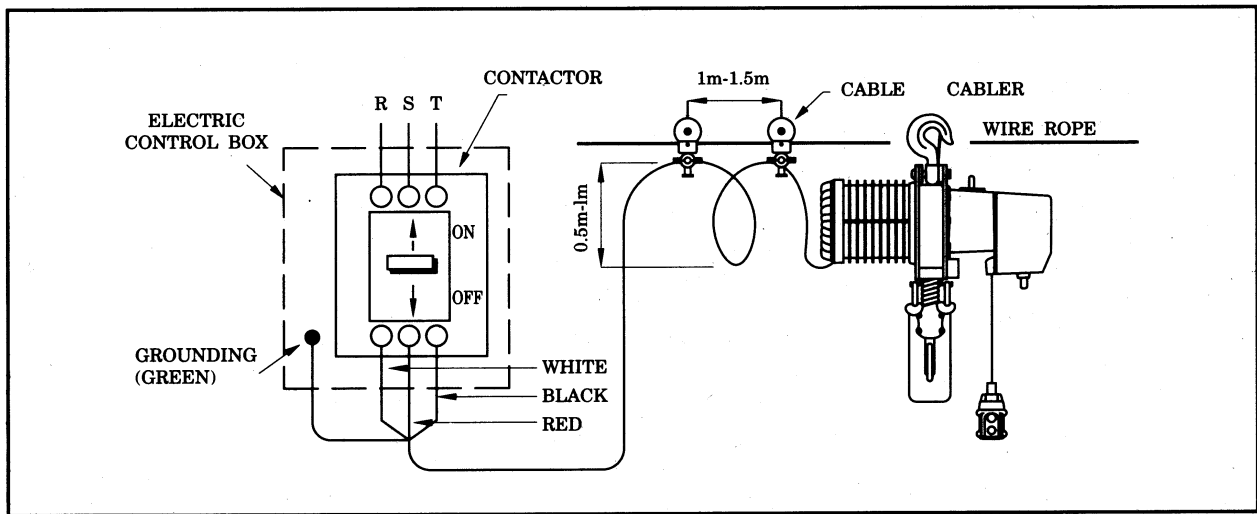

Illust. 7

(4) Operation Test

(a) Firmly push  switch button to lower load chain until the limit spring touches the limit switch. Power should be cut off automatically.

(b) Firmly push  switch button to check the collection of load chain into chain bucket.

(c) Check the emergency stop device function (if fitted):

While holding down either  or  button on the push button switch, push the emergency stop button. Check that the hook stops when the emergency stop button is pushed. Also, check the hoist does not move in response to the push button switch.


Finally, check that the emergency stop device pops out when turned to the right and that operation can be resumed thereafter. If the equipment fails to pass another above checks, check the wiring and automatic locking function of the emergency stop device.

(d) Check load chain lubrication (It has been lubricated at our works, but the lubricant may dry out during transportation). Any readily available lubricant is recommended. It is further advisable to keep a small amount of lubricant in chain bucket to allow chain in oil bath.


(e) Check chain position. Weld joints on links must face the same direction (Illust. 8), correct chain operation can only be achieved when all joints are vertically in line.

CAUTION

The bottom hook on multi-fall hoist must never be rotated as Shown below. (Illust.9)

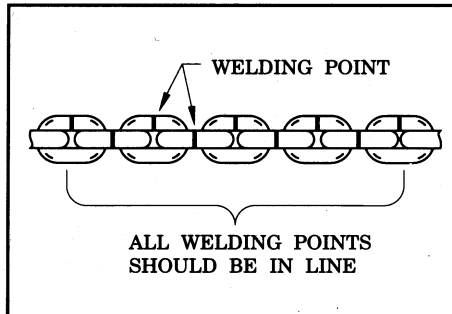

Illust.8

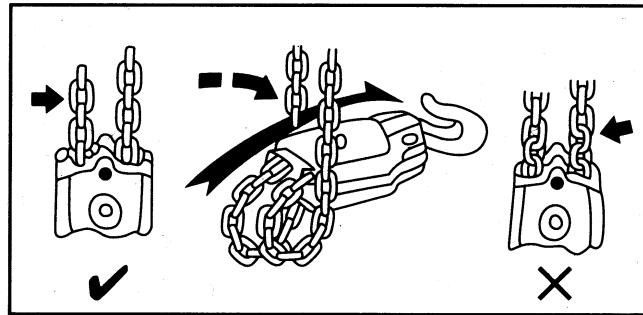

Illust.9

5. OPERATION

After running test and checks have been completed, the hoist will be ready for normal Operation.

WARNING

Since dealing with heavy loads may involve unexpected danger all of the “SAFETY RULES” (Ref 3.) must be followed and the operator must be aware of the following points while using the hoist.

- (1) The operator must have a clear and unobstructed view of the entire working area before operating the hoist.
- (2) The operator must check that the entire working area is safe and secure before operating the hoist.
- (3) When using the hoist with a motorized trolley, the operator must take care to prevent excessive load swinging by sympathetic use of the trolley controls.

6. MAINTENANCE AND INSPECTION



Do not perform maintenance on the hoist while it is carrying a load Except monthly checking for the brake or limit switch.



Before performing maintenance do not forget to affix tags to the Power source and the push button switch reading : “DANGER”, “EQUIPMENT BEING REPAIRED”.

6.1 Maintenance

- (1) Check the level of gear box lubricant after the first 500 hours operation, thereafter check every 3 months and lubricate accordingly.

NOTE: WE RECOMMEND USING A LUBRICANT OIL EQUIVALENT TO ISO VG460.

- (2) Always keep the hoist unit dry and never misuse it in a manner likely to reduce its durability.
- (3) When it is necessary to keep the unit outdoors, a protective covering should be fitted.

6.2 Inspection

- (1) Daily inspection: Before starting daily operation, check the following,
 - (a) Correct power supply.
 - (b) “Up” , “Down” and “Emergency stop” (where fitted) test runs under no load.
 - (c) Correct motor performance.
 - (d) No abnormal or excessive noise.
 - (e) No malfunction of the bottom hook safety latch.
 - (f) Proper function of moving/turning parts, limit switches and brake.
 - (g) Well lubricated load chain.

(2) Monthly inspection



WARNING

Always use the hoist manufacture's recommended parts when repairing a hoist.


(a) Load chain:

Distorted, elongated or worn chain link will not sit properly on the load sprocket wheel and may cause chain breakage and/or damage to hoist unit. To ensure safe and efficient operation, the chain links must be checked for their pitch (inside length), inside width and outside width monthly according to following table 6-2-a at page 18.


Chain Wearing Test

Load Spectrum	Cubic mean Value	Using times	
		Non-lubricated	Lubricated
1 (Light)	50%	232000	688000
2 (Medium)	63%	116000	344000
3 (Heavy)	80%	58000	172000
4 (Very heavy)	100%	29000	86000

Above testing data under lifting height 1M

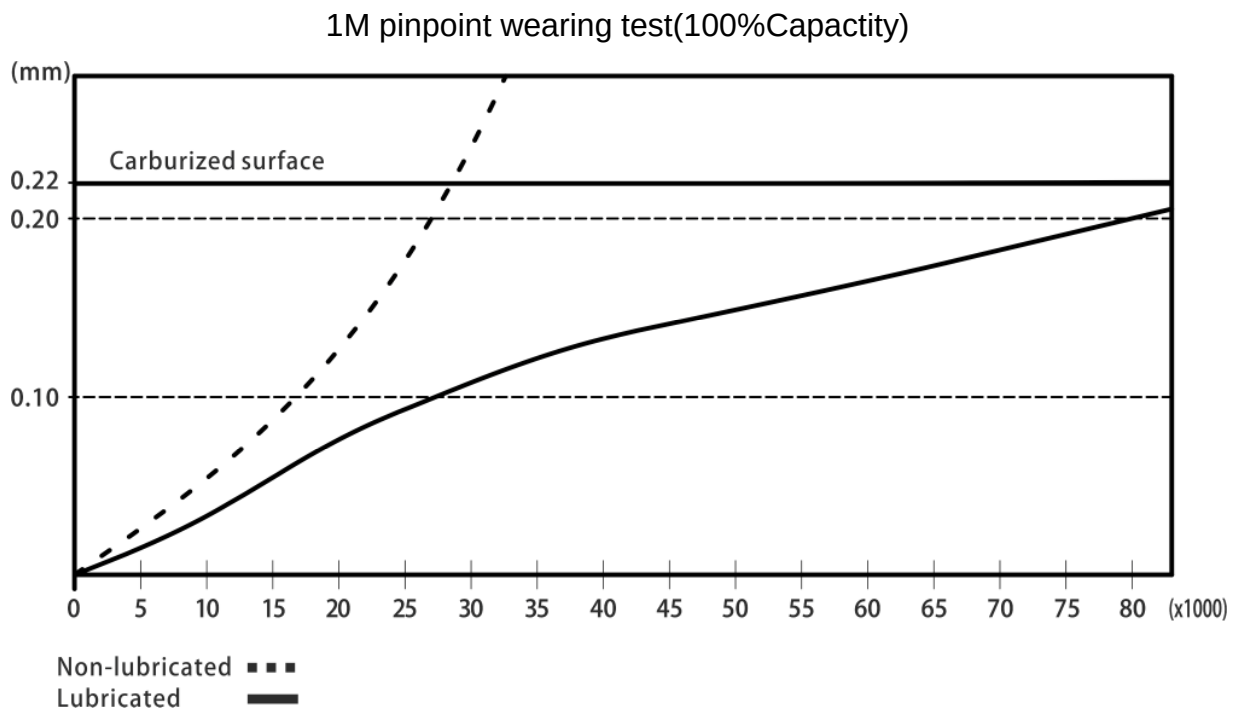

Number of cycles (Lifting + lowering)

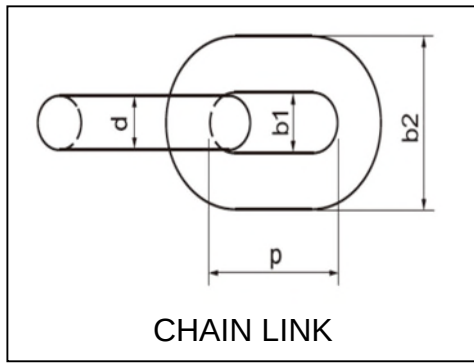


Model Reference Being Used	Dia.- Meter (mm) (d)	Inside Length (mm) (p)	Inside Width (mm) (b1)	Outside Width (mm) (b2)	Breaking Load (kn)
UH-100~400 series	Ø7.1	20.2	8.2	23.2	63

Table 6-2-a

(a) Load hook:

Check hook with care. If hook shows crack deformation or wear in excess of 5% of its original size, it should be replaced. (Ref. following table)

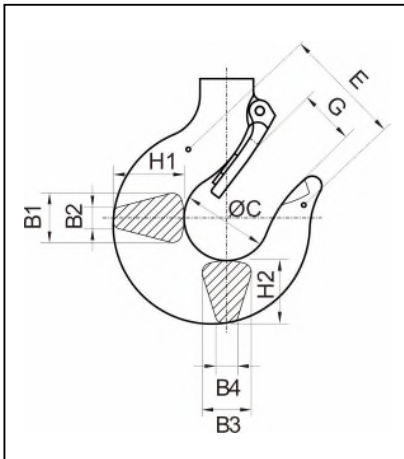

Capacity	Dimensions (mm)									Allow Stress
(ton)	H1	B1	B2	H2	B3	B4	C	G	E	(kg/mm ²)
0.5T,1T	32	22	9	28	22	9	40	28	60	70
2T	45	31	10	41	31	10	46	36	75	70
3T	55	34	19	48	34	19	52	40	90	70

Table 6-2-b

(c) Limit Switches:



A qualified electrician should perform this inspection.

Check correct operation of the limit switches. Clean thoroughly and apply a thin lubrication to ensure correct operation.

(3) Annual inspection



Your dealer should be asked to perform this inspection.

- (a) Check gearing for any excessive wear or damage.
- (b) Replace gearbox lubricant completely (**700C.C~800C.C ±10%**), as following table for your reference Table 6-2-c.
- (c) Check brake lining and ratchet pawl for any wear or damage.
- (d) Check operation of pawl spring.
- (e) After reassembly of above check, lifting a load several times to ensure good performance of the hoist before starting duty operation.

※Table of recommended oils according to DIN 51354

ISO-VGDIN 51519 viscosity At 40°C mm ² /s (cST)	Approximate viscosity of the VG Categories 50°C mm ² /s (cST)	ARAL	BP	ESSO	MOBIL OIL
VG460	251	Aral Degol BG 460-BMB 460	BP Energol GR-XP 460	Spartan EP-460	Mobilgear 634

ISO-VGDIN 51519 viscosity At 40°C mm ² /s (cST)	Approximate viscosity of the VG Categories 50°C mm ² /s (cST)	SHELL	TEXACO	I.P.	AGIP	TOTAL
VG460	251	Omala oil 460	Meropa 460	Mellana 460	Blasia 460	Carter EP 460

Table 6-2-c

(4) Chain Gauge – Wear and Stretch Measuring

- (a) The chain gauge is useful and convenience for measuring.
- (b) Please use a chain gauge to measure the chain pitch and diameter, such as illustrations (1) and (2).
- (c) Every chain ring must be measured, and the chain must be replaced when one of chain ring is wear or stretch.
- (d) It will be a cutting-out possibility if you use a chain fall either wear or stretch during operation.
- (e) Do not replace a chain fall by yourself and do please contact specific either service centers or contractors to help you out.
- (f) The chain fall must be replaced whole instead of a partial part.
- (g) The load sheave, regulator, and chain compressing wheel must be replaced the same time as you do a second time replacement.

Remark :

- (1) Chain must be perfect condition without any defects and attachments.

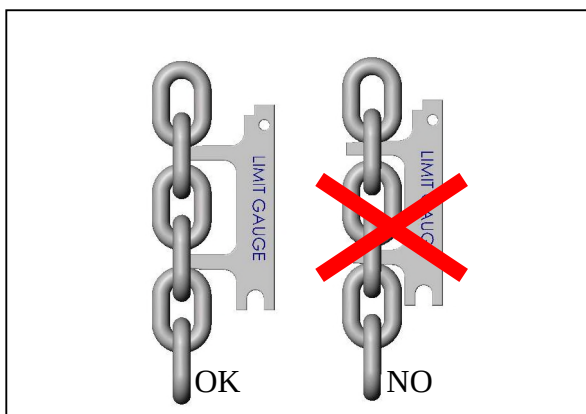


Illustration (1)
Chain pitch measure

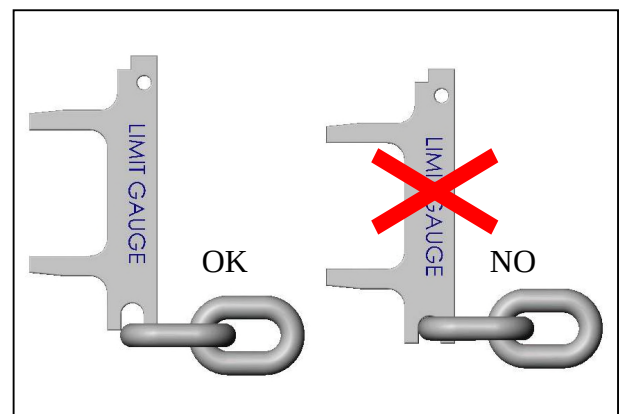


Illustration (2)
Diameter measure

7. TROUBLESHOOTING

7.1 Wiring Diagrams

- (1) C10011 for dual voltage connection of motor leads and A30004-1 for 200 series.....22
- (2) A40054 for 100 direct on line series and A10185-1 for 100 low voltage control series.....23
- (3) 001/A10019-2 for 300/400 series and 002/A20015-2 for 300D/400D series.....24
- (4) 024/A10173-1 for UHT/UHT series and 025/A20165-1 for UHTD/UHTD series.....25

The above listed wiring diagram for reference only.

The end user should refer to the wiring diagram stuck to the inside cover of the electric housing.

Our electric specifications can be done according to followings:

- (a) 3-Phase or 1-phase
- (b) 50Hz or 60 Hz
- (c) Single and dual voltage


Hertz \ Voltage	Dual Voltage	Single Voltage
	220V/380V 220V/440V 230V/460V	220 to 600
50 Hz		
60 Hz		

Table 7-1

Warranty Details:


- 1. Warranty Period : One year for Mechanical Spare Parts after purchase the product.
- 2. Non-Warranty Scope:
 - a. Electrical Spare Parts (ex. Contactor, Pendant, Phase Error Relay, etc.)
 - b. Expense Spare Parts (ex. Chain Bucket, Brake Lining, etc.)
 - c. Damage caused by unsuitable operation.
(galvanize plant, chemical plant, and dye-works etc.)
 - d. Damage caused by operating on the wrong electric voltage.
 - e. Damage caused by user emending the product.
 - f. Damage caused by natural disaster.
- 3. Warranty Scope shall be permitted by Cheng Day Machinery and Within One Year of damaged Mechanical Spare Parts Repair and Replacement.
(circumstance stated in detail No. 2 are not included.)

DUAL VOLTAGE CONNECTION OF MOTOR LEADS

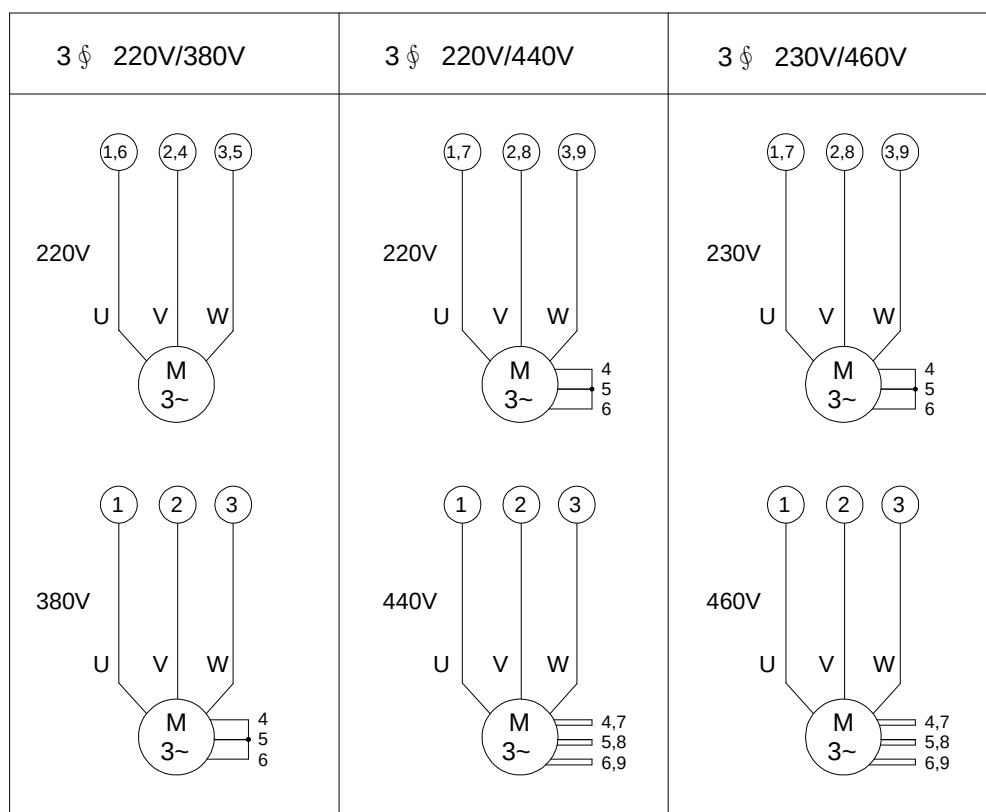


C10011

200 SERIES

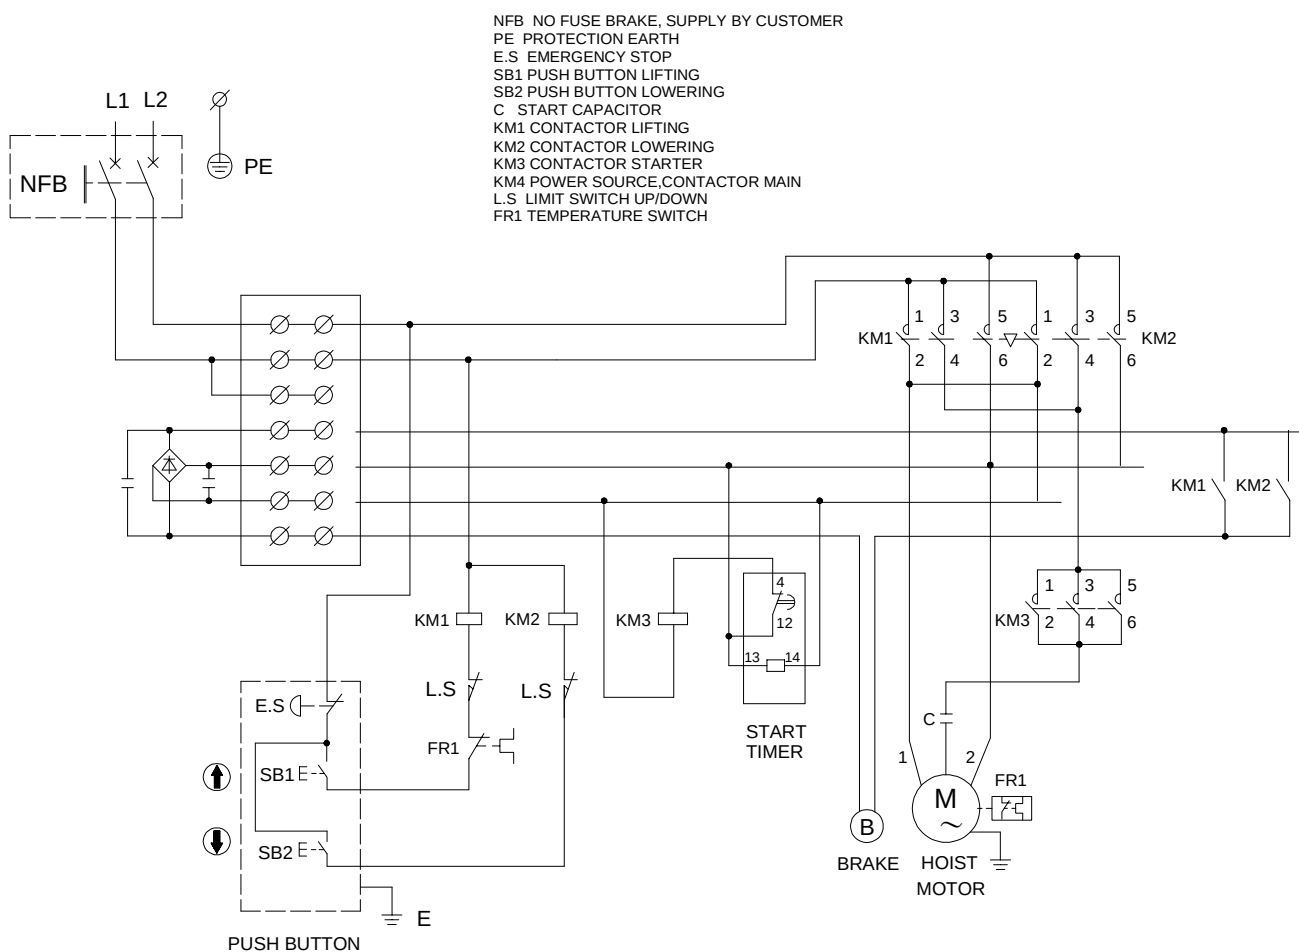

A30004-1


100 DIRECT ON LINE SERIES

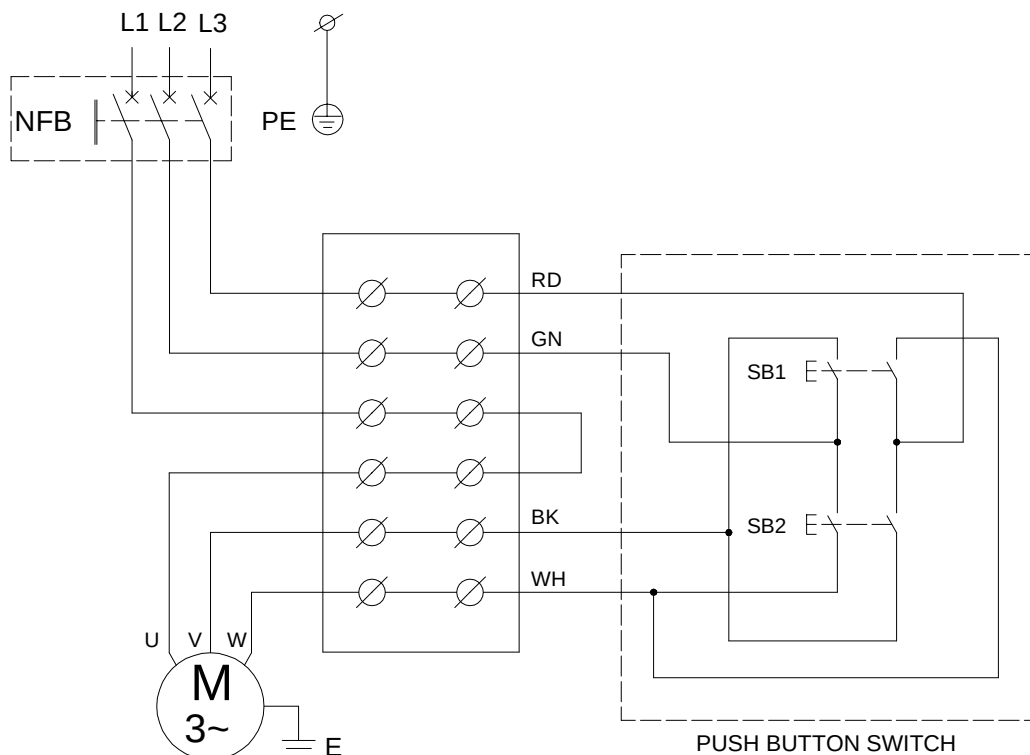

NFB NO FUSE BRAKE, SUPPLY BY CUSTOMER
 PE PROTECTION EARTH
 SB1 PUSH BUTTON LIFTING
 SB2 PUSH BUTTON LOWERING

A40054

100 LOW VOLTAGE CONTROL SERIES

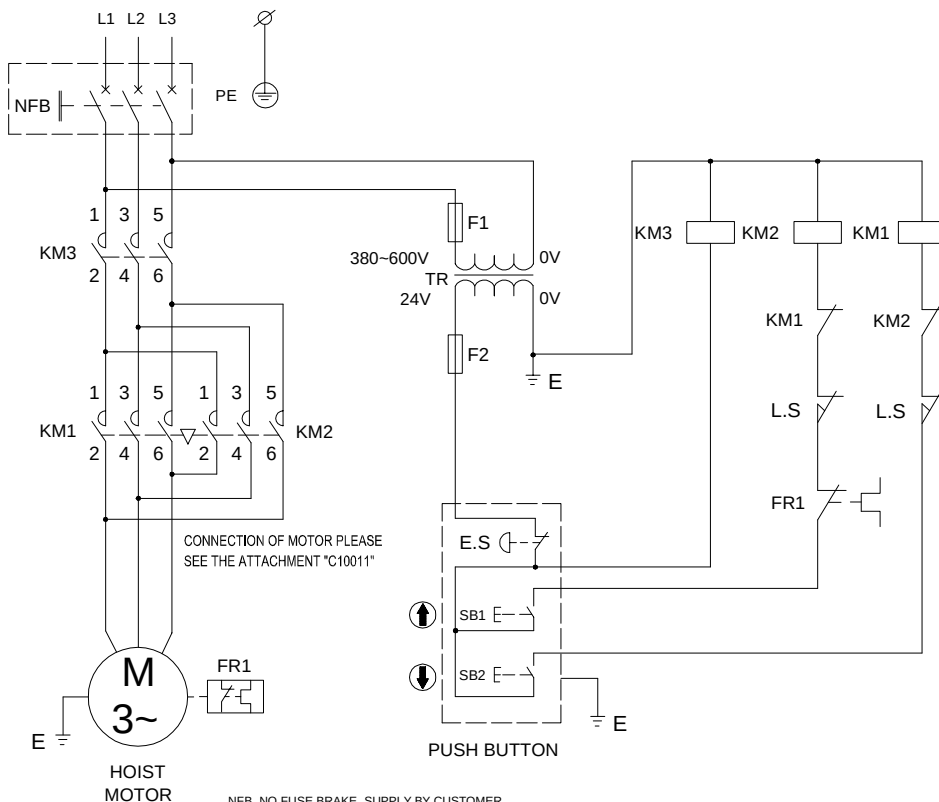


CONNECTION OF MOTOR PLEASE
 SEE THE ATTACHMENT "C10011"

NFB NO FUSE BRAKE, SUPPLY BY CUSTOMER
 PE PROTECTION EARTH
 E.S EMERGENCY STOP
 SB1 PUSH BUTTON LIFTING
 SB2 PUSH BUTTON LOWERING
 TR TRANSFORMER FOR CONTROL POWER
 KM1 CONTACTOR LIFTING
 KM2 CONTACTOR LOWERING
 KM3 POWER SOURCE, CONTACTOR MAIN
 FR1 TEMPERATURE SWITCH


A10185-1

UHT/UHT SERIES

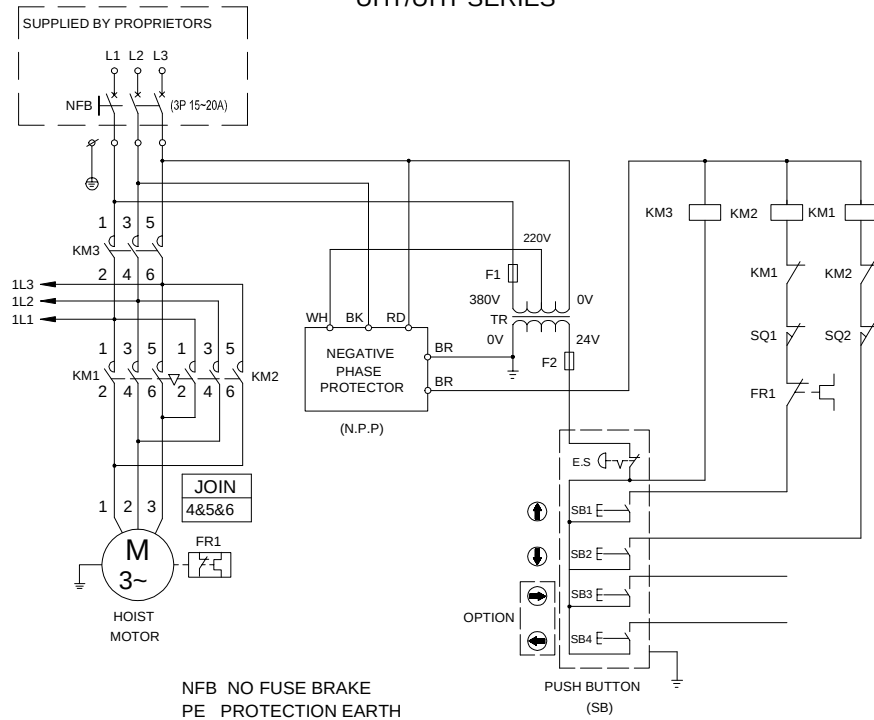

024/A10173-1

UHTD/UHTD SERIES

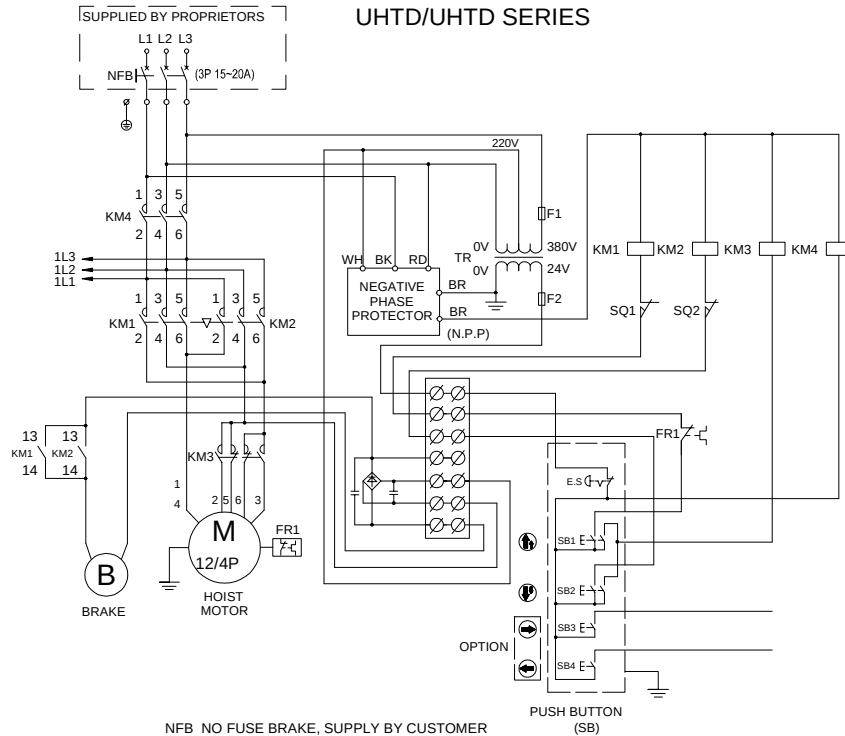

025/A20165-1


7.2 Troubleshooting and Remedial Action

SITUATION	CAUSE	REMEDY
Hoist will not operate	(1) Phase error relay operated Due to incorrect phase Connections. (2) Blown power fuse or tripped power circuit breaker. (3) Blown control circuit fuse. (4) Broken/disconnected power or control circuit wire. (5) Low supply voltage (6) Motor hums but does not Rotate (7) Emergency stop button release pushed (if fitted) (8) Faulty contactor	Reverse any two phase connections Check supply requirements and refuse/reset breaker to meet requirements Check fuse for correct rating and replace Locate and repair/reconnect Check if 10% reduction in voltage, have mains supply checked Check phases to motor-insulate and repair Check the cause as necessary Operate manually if hoist runs then control circuit/coil is faulty-locate fault and repair. If hoist does not run then check main supply. If input supply is correct but there is a faulty output supply then replace the contactor
Hoist will not stop	Welded contacts in contactor	Replace contactor
Brake slips	Abrasion of motor brake	Replace
Hoist runs but does not lift	(1) Clutch slipping	Contact your authorized "U-MEGA" dealer – this adjustment needs to be carried out on a test rig
Abnormal sound on load chain/chain sprocket	(1) Chain dry (2) Worn chain sprocket	Lubricate Replace load chain and chain sprocket
Electric shock	(1) Poor earth connection (2) Accumulated foreign matter/moisture on electrical parts	Provide correct earth connection Remove foreign matter/dry electrical parts
Oil leak	(1) No oil plug (2) Loose fitting of oil plug (3) No plug packing (4) Worn or deteriorated oil packing	Attach the normal oil plug Fasten the plug tightly Attach normal packing Attach the new packing
Hoist runs but can't lift rated load (100-Series)	Clutch Slipping	Tighten adjusting nut and reverse 1/8 circle

8.Drawings and Parts List

(1)VII-1 MOTOR EXPLOSION & HOUSING DRAWING	27
(2)VII-1 MOTOR ASSEMBLY & HOUSING B.O.M	28
(3)VII-2 HOOK EXPLOSION DRAWING	32
(4)VII-2 HOOK ASSEMBLY B.O.M	33
(5)VII-3 LOAD CHAIN SECTION EXPLOSION DRAWING	35
(6)VII-3 LOAD CHAIN SECTION ASSEMBLY B.O.M	36
(7)VII-4 REDUCING GEARBOX EXPLOSION DRAWING	38
(8)VII-4 REDUCING GEARBOX ASSEMBLY B.O.M	39
(9)VII-5 ELECTRIC EXPLOSION (STANDARD) DRAWING	41
(10)VII-5 ELECTIRC PARTS ASSEMBLY(STANDARD) B.O.M	42
(11)VII-6 LOW HEADROOM MODEL'S TROLLEY EXPLOSION DRAWING	44
(12)VII-6 LOW HEADROON MODEL'S TROLLEY ASSEMBLY B.O.M	45

VII – 1 MOTOR ASSEMBLY & HOUSING

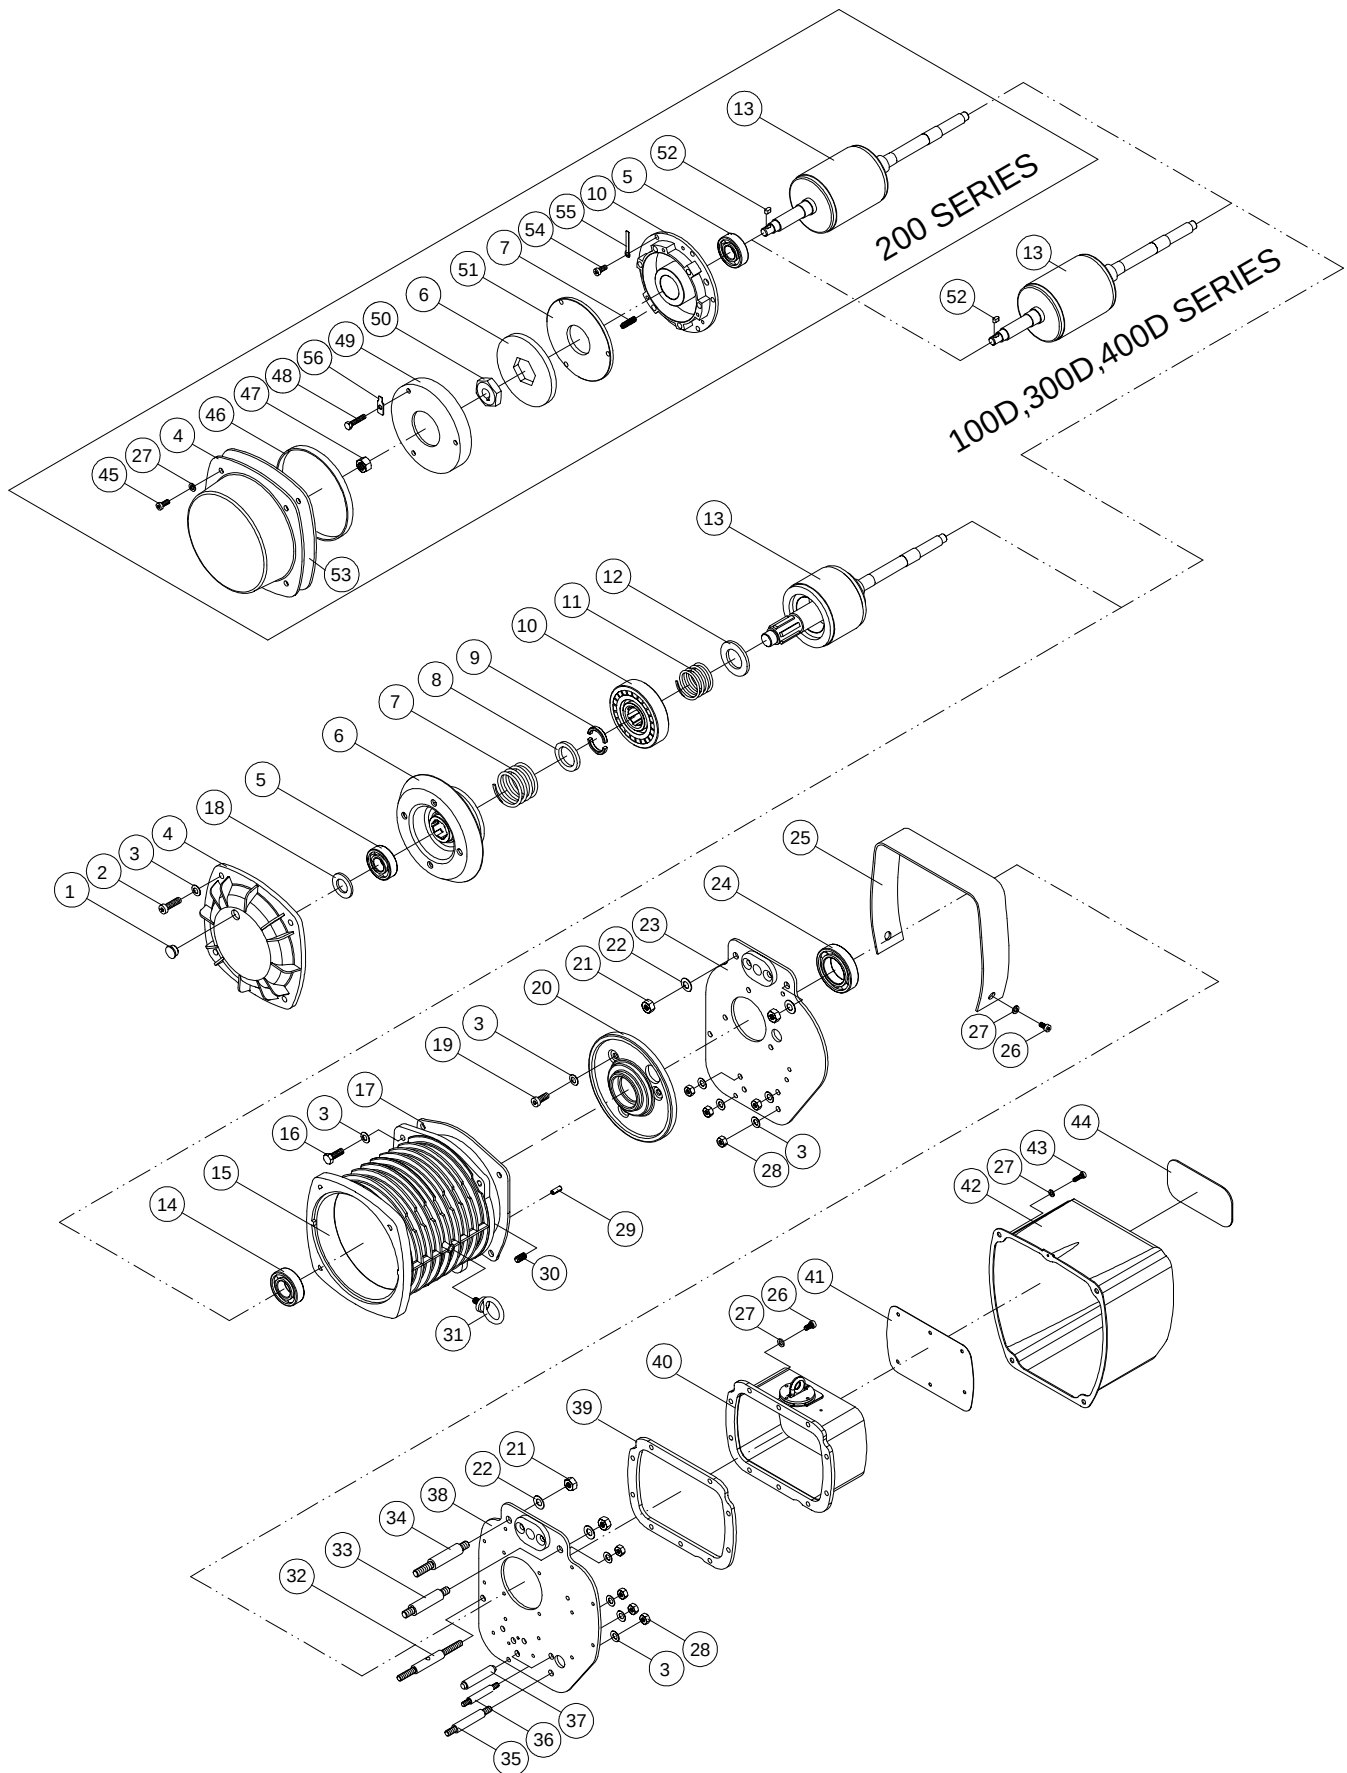

VII – 1 MOTOR ASSEMBLY & HOUSING

D:DUAL SPEED

KEY NO.	PARTS CODE	DESCRIPTION	Q'TY REQ'D EACH UNIT															
			100			200			300				400					
			1/2	1	2	1/2	1	2	1/2	1	2	3	1/2	1	2	3		
1	400263	Dust Stopper	1						1				1					
2	400014	Hex. Recess Bolt<M8×30L>	4						4				4					
3	400095	Spring Washer<M8>	17,13D			13			17,13D				17,13D					
4	100431B	Motor End Cover	1						1				1					
	100440B		1D			1			1D				1D					
5	405577	Bearing<6204 2RS>	1,1D			1			1,1D				1,1D					
6	100432	Brake Drum	1						1				1					
	100408	Brake Shoe Lining	1D			1			1D				1D					
7	400236	Brake Spring	1						1				1					
	408554		6D			6			6D				6D					
8	100364	End Spacer	1						1				1					
9	100362	Load Brake Gear Spacer	2						2				2					
10	100413	Electro-Magnetic Brake Controller	1						1				1					
	100500	Magnetic Coil Ass'y	1D			1			1D				1D					
11	400235	Spindle Spring	1						1				1					
12	100428	Spring Pad	1						1				1					
13	100320	Motor Rotor	1						1									
	100321										1				1			
	100322					1												
	100323		1D						1D						1D			
	100318												1D					
	100319												1					
	100302	Motor Rotor (110V, 115V)				1												
14	400129	Bearing<6005 ZZ>	1,1D			1			1,1D				1,1D					

VII – 1 MOTOR ASSEMBLY & HOUSING

D:DUAL SPEED

KEY NO.	PARTS CODE	DESCRIPTION	Q'TY REQ'D EACH UNIT													
			100			200			300				400			
			1/2	1	2	1/2	1	2	1/2	1	2	3	1/2	1	2	3
15	A	Motor Stator Ass'y	1						1							
	B			1					1							
	C				1											
	D		1D				1D									
16	400013	Hex. Recess Bolt<M8×25L>	2						2							
17	402505	Gasket 5#	1,1D			1			1,1D					1,1D		
18	400577	Corrugated Washer<6204>	1						1					1		
19	400012	Hex. Recess Bolt<M8×20L>	3,3D			3			3,3D					3,3D		
20	100460	Flange	1,1D			1			1,1D					1,1D		
21	400082	Hex. Nut<M10×1.5>	4,4D			4			4,4D					4,4D		
22	400096	Spring Washer<M10>	9,9D			9			9,9D					9,9D		
23	265649	Motor Front Plate Ass'y	1,1D			1			1,1D					1,1D		
24	400134	Bearing<6008 ZZ>	1,1D			1			1,1D					1,1D		
25	400265	Rubber Cover	1,1D			1			1,1D					1,1D		
26	408635	Hex. Recess Bolt<M6×14L>	12,12D			12			12,12D					12,12D		
27	400094	Spring Washer<M6>	20,26D			26			20,26D					20,26D		
28	400081	Hex. Nut<M8×1.25>	8,8D			8			8,8D					8,8D		
29	400213	Spring Pin<Ø6×16L>	1,1D			1			1,1D					1,1D		
30	400585	Threaded Stud<M8×16L>	1,1D			1			1,1D					1,1D		
31	400217	Eye Bolt<M8×1.25>	1,1D			1			1,1D					1,1D		
32	200235	Lock Stud C				1			1,1D					1,1D		
	200238	Lock Stud F	1,1D													
33	200234	Lock Stud B	1,1D			1			1,1D					1,1D		
34	200233	Lock Stud A	1,1D			1			1,1D					1,1D		
35	200236	Lock Stud D	1,1D			1			1,1D					1,1D		
36	200237	Lock Stud E	1,1D			2			2,2D					2,2D		
	200239	Lock Stud G	1,1D													
37	200240	Lock Pin				1			1,1D					1,1D		

VII – 1 MOTOR ASSEMBLY & HOUSING







D:DUAL SPEED

KEY NO.	PARTS CODE	DESCRIPTION	Q'TY REQ'D EACH UNIT													
			100			200			300				400			
			1/2	1	2	1/2	1	2	1/2	1	2	3	1/2	1	2	3
38	265652	Gearbox Endplate	1,1D			1			1,1D				1,1D			
39	402523	Gasket 23#	1,1D			1			1,1D				1,1D			
40	200043B	Gearbox Casing				1			1,1D							
	1,1D															
					1			1,1D								
											1,1D					
41	402525	Gasket 25#	1,1D													
	402524	Gasket 24#				1			1,1D				1,1D			
42	300763B	Electric Comp Oneness Casing	1,1D			1			1,1D				1,1D			
43	400421	Hex. Recess Bolt<M6×10L>	4,4D			4			4,4D				4,4D			
44		Name Plate	1,1D			1			1,1D				1,1D			
45	400007	Hex. Recess Bolt<M6×20L>	4D			4			4D				4D			
46	400266	Protection Rubber Band	1D			1			1D				1D			
47	400091	Lock Nut<M12×1.75>	1D			1			1D				1D			
48	406839	Hex. Bolt<M6×1.0×30L>	3D			3			3D				3D			
49	100411	Brake Drum Cover	1D			1			1D				1D			
50	100303	Brake Bushing	1D			1			1D				1D			
51	100405	Fixed Brake Plate	1D			1			1D				1D			
52	400963	Key<6×6×15L>				1			1D				1D			
53	402578	Gasket 51#	1D			1			1D				1D			
54	400006	Hex. Recess Bolt<M6×16L>	6D			6			6D				6D			
55	300801	Cable Fixing Plate	2D			2			2D				2D			
56	103491	Single Tab Washer	3D			3			3D				3D			

VII – 1 MOTOR ASSEMBLY & HOUSING

KEY NO.	PARTS CODE		DESCRIPTION	Ø - HZ- V	
15	A	132551	Motor Stator Ass'y	3Ø 60HZ	220 / 380 V
		132552			220 / 440 V
		132553			230 / 460 V
		132555			600 V
		132561		3Ø 50HZ	220 / 380 V
		132562			400 V
		132563			415 V
	B	132581		3Ø 60HZ	220 / 380 V
		132583			220 / 440 V
		132584			230 / 460 V
		132586			600 V
		132591		3Ø 50HZ	220 / 380 V
		132592			415 V
	C	132623		1Ø 60HZ	115V
		132621			220 V
		132622			230 V
		132626		1Ø 50HZ	110 V
		132627			220 V
		132628			230 V
	D	132651		3Ø 60HZ	220 V
		132661			230 V
		132652			380 V
		132653			460 V
		132654			600 V
		132656		3Ø 50HZ	220 V
		132657			380 V
		132658			415 V

HOOK EXPLOSION

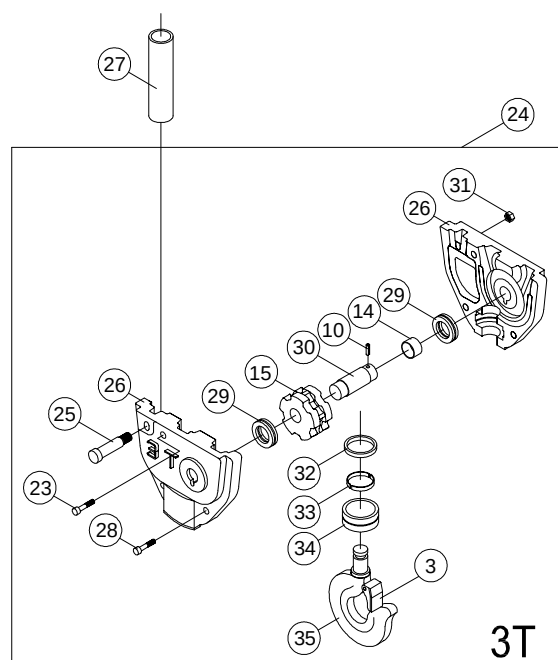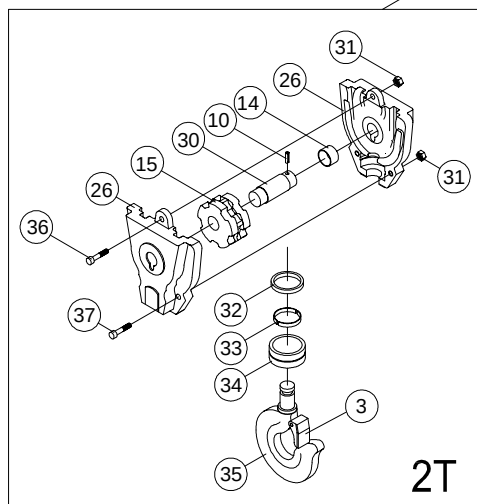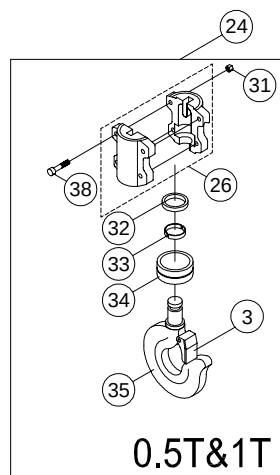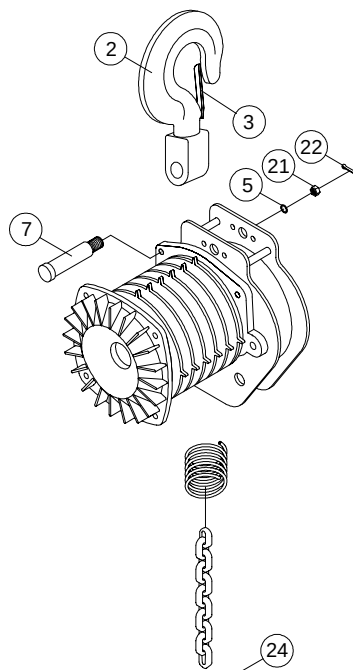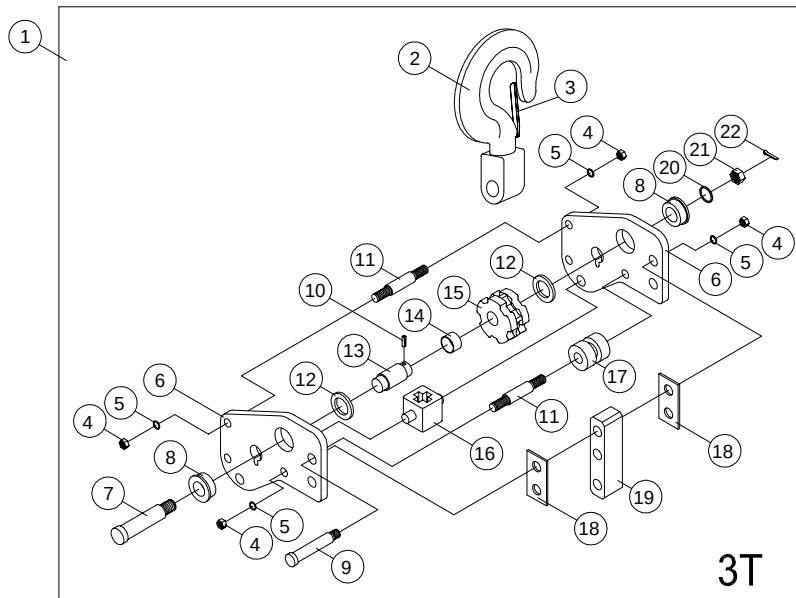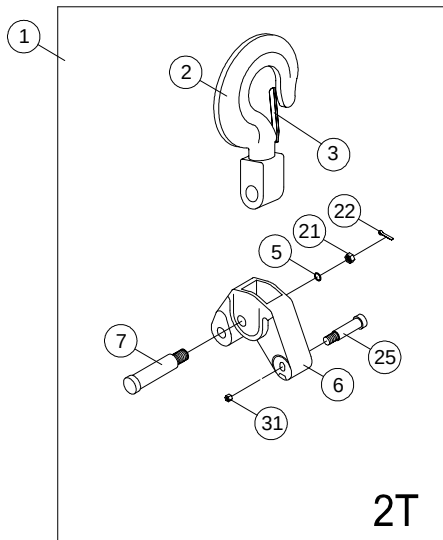

VII – 2 HOOK ASSEMBLY

D : DUAL SPEED


KEY NO.	PARTS CODE	DESCRIPTION	Q'TY REQ'D EACH UNIT													
			100(D)			200			300(D)				400(D)			
			1/2	1	2	1/2	1	2	1/2	1	2	3	1/2	1	2	3
1	200049B	Top Hook Frame Ass'y			1			1			1				1	
	200048B											1				1
2	209341B	Top Hook	1			1			1				1			
	209342B			1			1			1				1		
	209343B				1			1			1				1	
	209345B											1				1
3	400487	Safety Latch Ass'y	2			2			2				2			
	400488				2			2			2				2	
	400489											2				2
4	400091	Lock Nut<M12×1.75>										8				8
5	400097	Spring Washer<M12>	1			1			1			9	1			9
6	200154B	Hook Bracket			1			1			1				1	
	200726B	Hook Bracket Disc Plate										2				2
7	200093	Lock Bolt	1			1			1				1			
	200094											1				1
8	200172	Lock Bolt Sleeve										2				2
9	200169	Beam Connector Pin										2				2
10	400212	Spring Pin<ø5×16L>			1			1			1	2			1	2
11	200147	Stay Bolt										3				3
12	200633	Sprocket Spacer Ring										2				2
13	200115	Sprocket Axle										1				1
14	400171	Needle Bearing<HK 25/26>			1			1			1	2			1	2
15	200108	Sprocket			1			1			1	2			1	2
16	200180	Chain Guide										1				1
17	200190	Chain Pressing Roller										1				1
18	200173	Beam Connector Pad										2				2
19	200721	Beam Connector										1				1
20	400098	Spring Washer<M16>										1				1
21	400084	Hex. Nut<M12×1.75>	1			1			1				1			
	400085	Hex. Nut<M16×1.5>										1				1
22	400603	Cotter Pin<3/32" ×1"L>	1			1			1				1			
23	400015	Hex. Recess Bolt<M8×1.25×40L>										1				1

VII – 2 HOOK ASSEMBLY

D : DUAL SPEED

KEY NO.	PARTS CODE	DESCRIPTION	Q'TY REQ'D EACH UNIT													
			100(D)			200			300(D)				400(D)			
			1/2	1	2	1/2	1	2	1/2	1	2	3	1/2	1	2	3
24	200028B	Bottom Hook Ass'y	1			1			1				1			
	200021B			1			1			1				1		
	200022B				1			1			1				1	
	200023B											1				1
25	200176	Chain Connecting Pin			1			1			1				1	
26	200096B	Bottom Hook Cover Set	1			1			1				1			
	200097B				2			2			2				2	
	200098B											1				1
	206726B											1				1
27	200351	Limit Tube										1				1
28	400017	Hex. Recess Bolt<M8×1.25×35L>										2				2
29	400176	Needle Bearing<AXK/2AS 2542>										2				2
30	200114	Sprocket Axle			1			1			1				1	
	200123											1				1
31	400087	Lock Nut<M6×1>	4			4			4				4			
	400088	Lock Nut<M8×1.25>			4			4			4	1			4	1
32	200131	End Spacer	1			1			1				1			
	200132				1			1			1				1	
	200133											1				1
33	200127	Load Brake Gear Spacer	2			2			2				2			
	200128				2			2			2				2	
	200129											2				2
34	400157	Thrust Bearing<2904>	1			1			1				1			
	400158	Thrust Bearing<2905>			1			1			1				1	
	400159	Thrust Bearing<51106>										1				1
35	209351B	Bottom Hook	1			1			1				1			
	209352B			1			1			1				1		
	209353B				1			1			1				1	
	209355B											1				1
36	400014	Hex. Recess Bolt<M8×1.25×30L>			1			1			1				1	
37	400426	Hex. Recess Bolt<M8×1.25×45L>			2			2			2				2	
38	400008	Hex. Recess Bolt<M6×1.0×25L>	4			4			4				4			

VII-3 LOAD CHAIN EXPLOSION

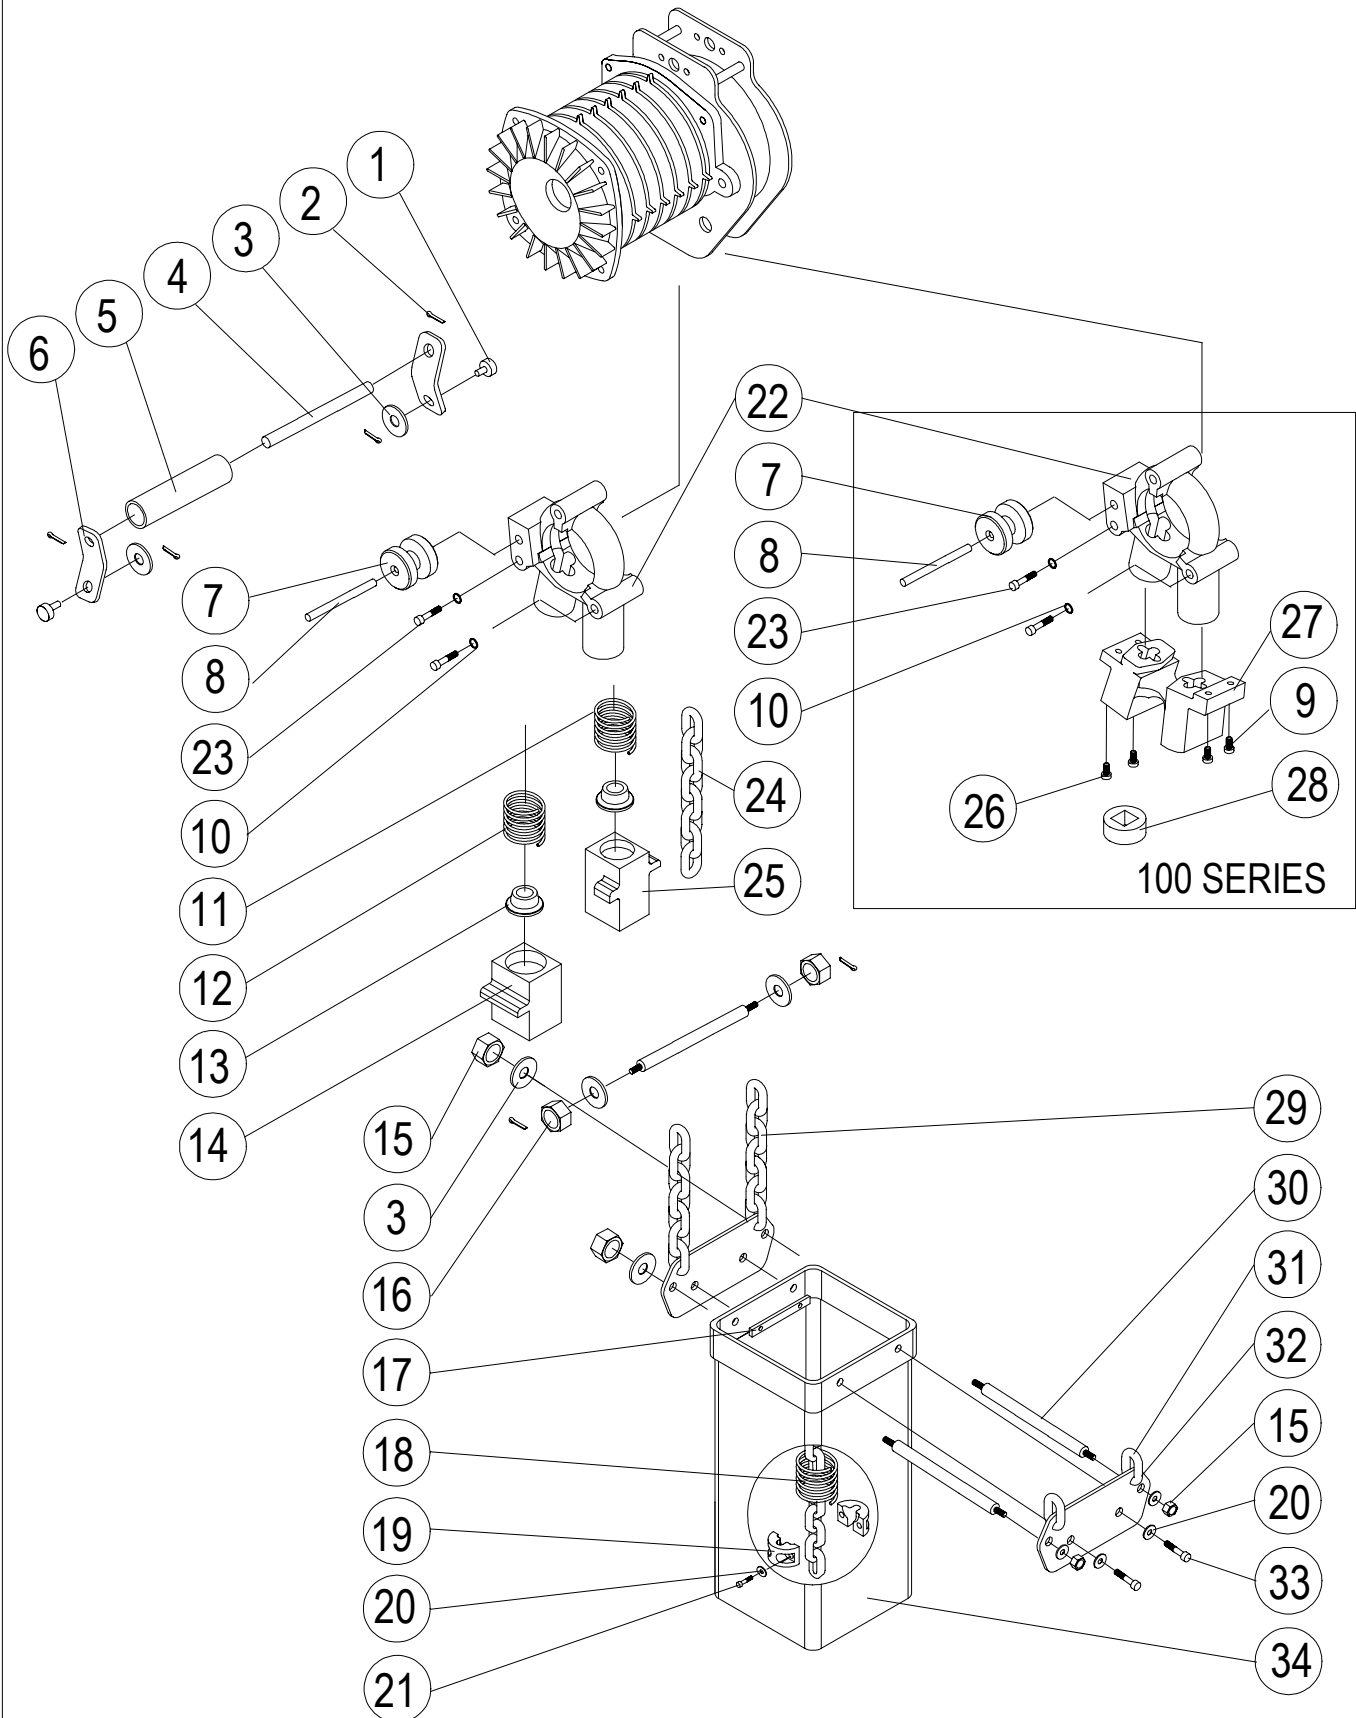

VII – 3 LOAD CHAIN SECTION

D:DUAL SPEED


KEY NO.	PARTS CODE	DESCRIPTION	Q'TY REQ'D EACH UNIT													
			100(D)			200			300(D)				400(D)			
			1/2	1	2	1/2	1	2	1/2	1	2	3	1/2	1	2	3
1	200230	Pin	2			2			2				2			
2	400603	Cotter Pin<3/32"×1"L>	6			6			6				6			
3	400670	Flat Washer<Ø22×1.5mm>	4			4			4				4			
4	200231	Lock Pin	1			1			1				1			
5	200232	Retaining Tube	1			1			1				1			
6	200229	Bucket Retaining Pad	2			2			2				2			
7	200159	Chain Compressing Wheel	1			1			1				1			
8	400281	Compressing Wheel Axle	1			1			1				1			
9	400008	Hex. Recess Bolt <M6×1.0×25L>	2													
10	400095	Spring Washer<M8>	3			3			3				3			
11	400228	Guide Spring A				1			1				1			
12	400229	Guide Spring B				1			1				1			
13	200183	Bushing				2			2				2			
14	200205	Guide Tube B				1			1				1			
15	400080	Nut<M6×1.0>	4			4			4				4			
16	400081	Nut<M8×1.25>	2			2			2				2			
17	200226	Bucket Inner Plate	2			2			2				2			
18	400232	Limit Spring C				2			2				2			
	400231	Limit Spring B							1			1				1
19	200200	Chain Stopper	2		4	2		4	2		4		2		4	
20	400094	Spring Washer<M6>	10		12	10		12	10		12		10		12	
21	400007	Hex. Recess Bolt <M6×1.0×20L>	2		4	2		4	2		4		2		4	

VII – 3 LOAD CHAIN SECTION

D:DUAL SPEED

KEY NO.	PARTS CODE	DESCRIPTION	Q'TY REQ'D EACH UNIT													
			100(D)			200			300(D)				400(D)			
			1/2	1	2	1/2	1	2	1/2	1	2	3	1/2	1	2	3
22	200158	Regulator				1			1				1			
	200157		1													
23	400012	Hex. Recess Bolt <M8×1.25×20L>	3			3			3				3			
24	400542	Load Chain	1			1			1				1			
25	200204	Guide Tube A				1			1				1			
26	400007	Hex. Recess Bolt <M6×1.0×20L>	2													
27	200206	Guide Tube Ass'y	1													
28	200310	Limit Stopper	1		3											
29	400565	Bucket Chain	2			2			2				2			
30	200228	Holding Stud	2			2			2				2			
31	400564	Bucket Chain	2			2			2				2			
32	200227	Bucket Side Plate	2			2			2				2			
33	400055	Cross Headed Screw <M6×1.0×12L>	4			4			4				4			
34		Chain Bucket Ass'y	1			1			1				1			

VII-4 REDUCING GEARBOX

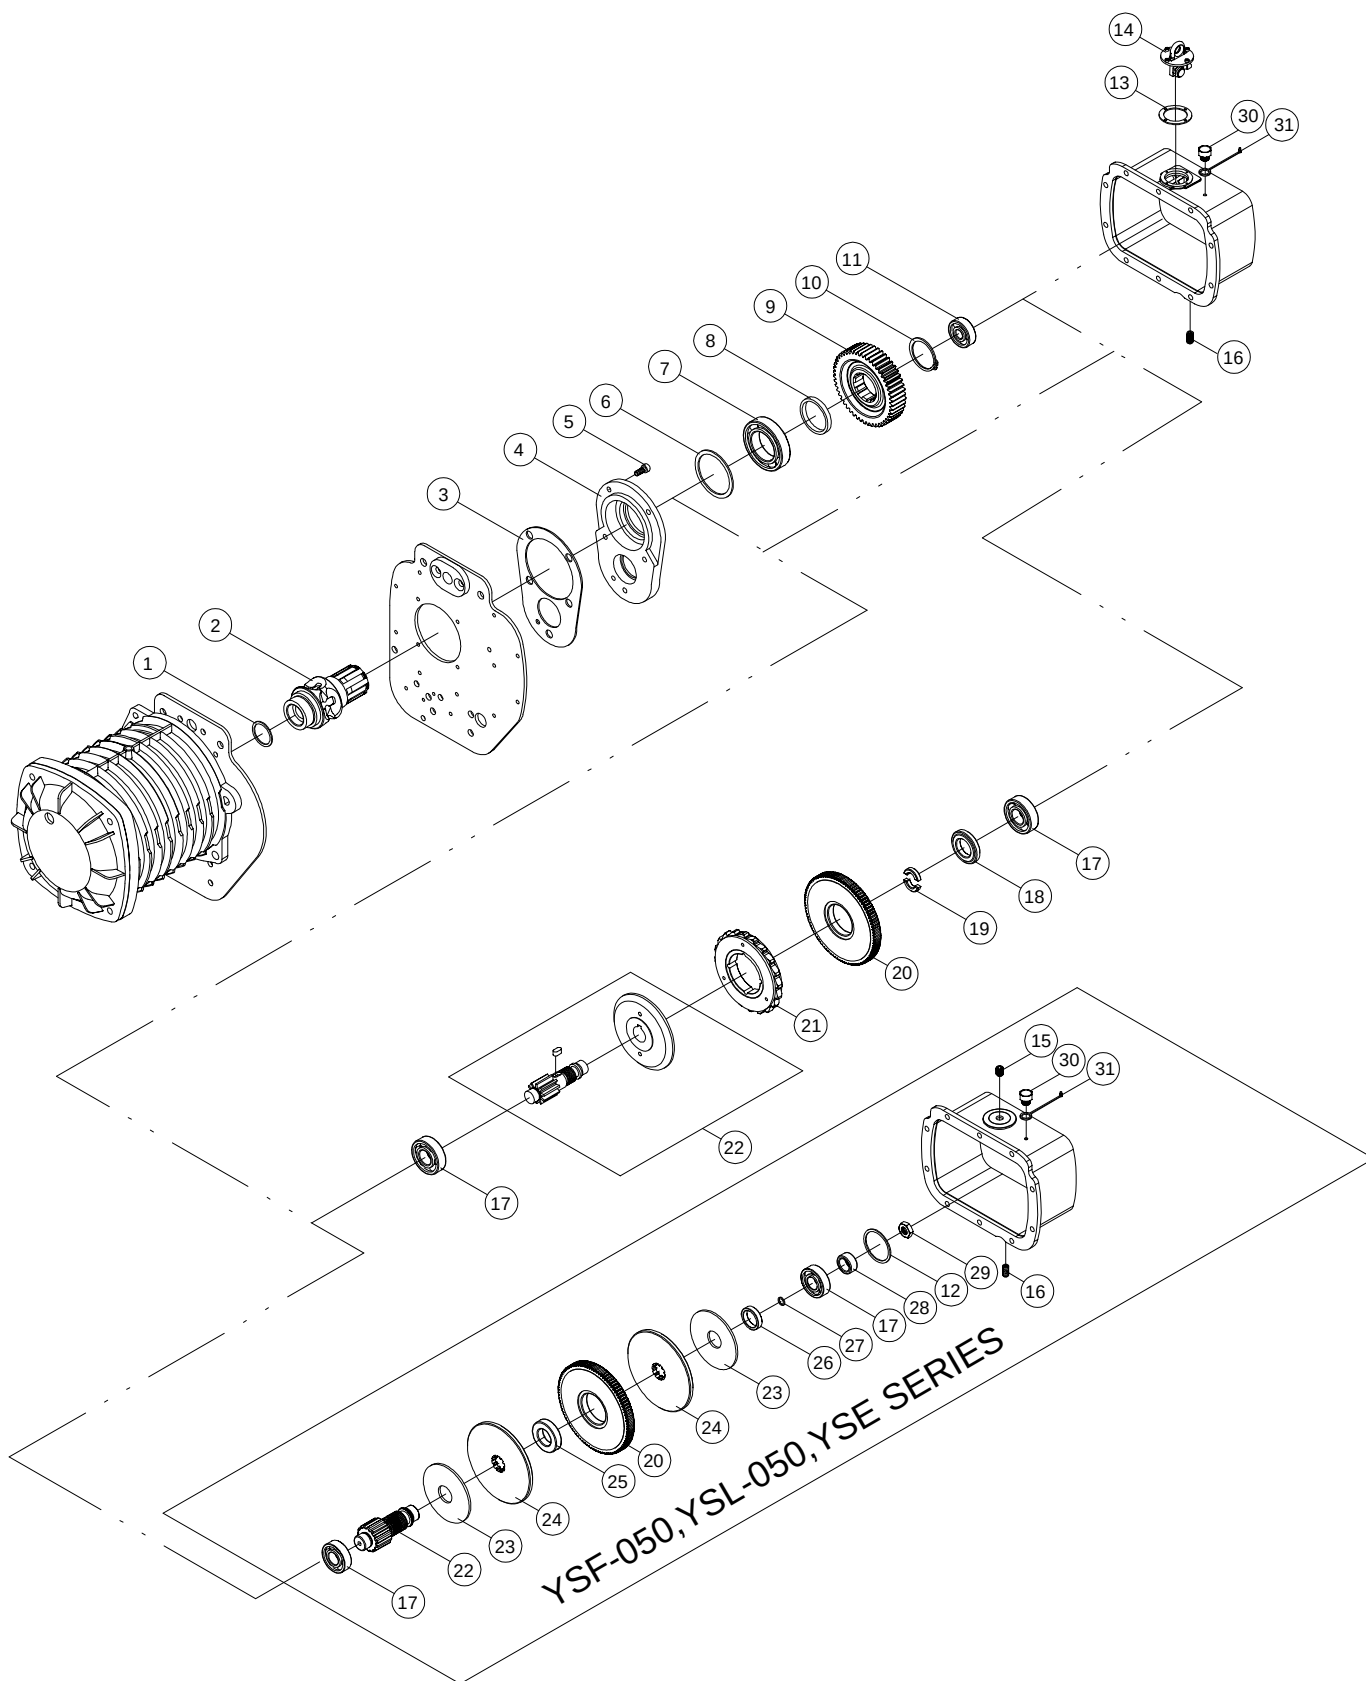

VII – 4 REDUCING GEARBOX

D:DUAL SPEED





KEY NO.	PARTS CODE	DESCRIPTION	Q'TY REQ'D EACH UNIT														
			100(D)			200			300(D)				400(D)				
			1/2	1	2	1/2	1	2	1/2	1	2	3	1/2	1	2	3	
1	404487	Oil Seal<17×28×6t>	1			1			1					1			
	400180	Oil Seal<18×28×8t>											1				
2	200196	Load Sheave	1			1			1					1			
	200197												1				
3	402503	Gasket 3#	1			1			1				1				
4	200210	Flange											1				
	200211		1			1			1								
5	408635	Hex. Recess Bolt<M6×1.0×14L>	5			5			5				5				
6	400184	Oil Seal<42×55×9t>	1			1			1				1				
7	400133	Bearing<6008>	1			1			1				1				
8	200628	Load Brake Gear Spacer	1			1			1				1				
9	200263	Load Brake Gear (4th Gear)	1			1			1					1			
	200264			1			1			1							
	200298												1				
10	400195	Retaining Ring<S-40>	1			1			1				1				
11	400128	Bearing<6301>	1			1			1				1				
12	400182	Oil Seal<25×40×6t>	1			1			1				1				
13	402504	Gasket 4#					1			1			1				
14	200060	Ratchet Pawl Bracket Ass'y					1			1			1				
15	400208	Oil Plug<3/8"PT>	1			1			1								
16	400207	Oil Plug<1/8"PT>	1			1			1				1				
17	407732	Bearing<6203>	2			2			2								
	407734	Bearing<6204>											2				
18	200275	End Spacer					1			1							
	200276												1				

VII – 4 REDUCING GEARBOX

D:DUAL SPEED

KEY NO.	PARTS CODE	DESCRIPTION	Q'TY REQ'D EACH UNIT													
			100(D)			200			300(D)				400(D)			
			1/2	1	2	1/2	1	2	1/2	1	2	3	1/2	1	2	3
19	200271	Load Brake Gear Spacer				2			2							
	200272						2			2						
	200273													2		
20	200363	Intermediate Gear				1										
	200594	(2nd.Gear) (110V, 115V)					1									
	200248	Intermediate Gear (2nd.Gear)				1			1							
	200593						1			1						
	200591												1			
	200251		1													
	200592														1	
21	200581	Ratchet Wheel														
22	200620	Load Brake Gear Shaft Ass'y (3rd Gear)					1			1						
	200256			1												
	200257		1													
	200619													1		
	200259					1			1							
	200618												1			
23	200291	Cone Spring Washer		2												
24	200290	Sliding Brake Disc		2												
25	200270	Bushing		1												
26	200630	Spacer		1												
27	400226	O-Ring<ø12×ø17×2.5t>		1												
28	200289	Oil Seal Bushing		1												
29	400090	Lock Nut<M12×1.25>		1												
30	200926	Hexagon Oil Plug <M12×1.25×16.5L>		1			1			1				1		
31	200927	Air Plug		1			1			1				1		

VII-5 ELECTRIC EXPLOSION(Standard)

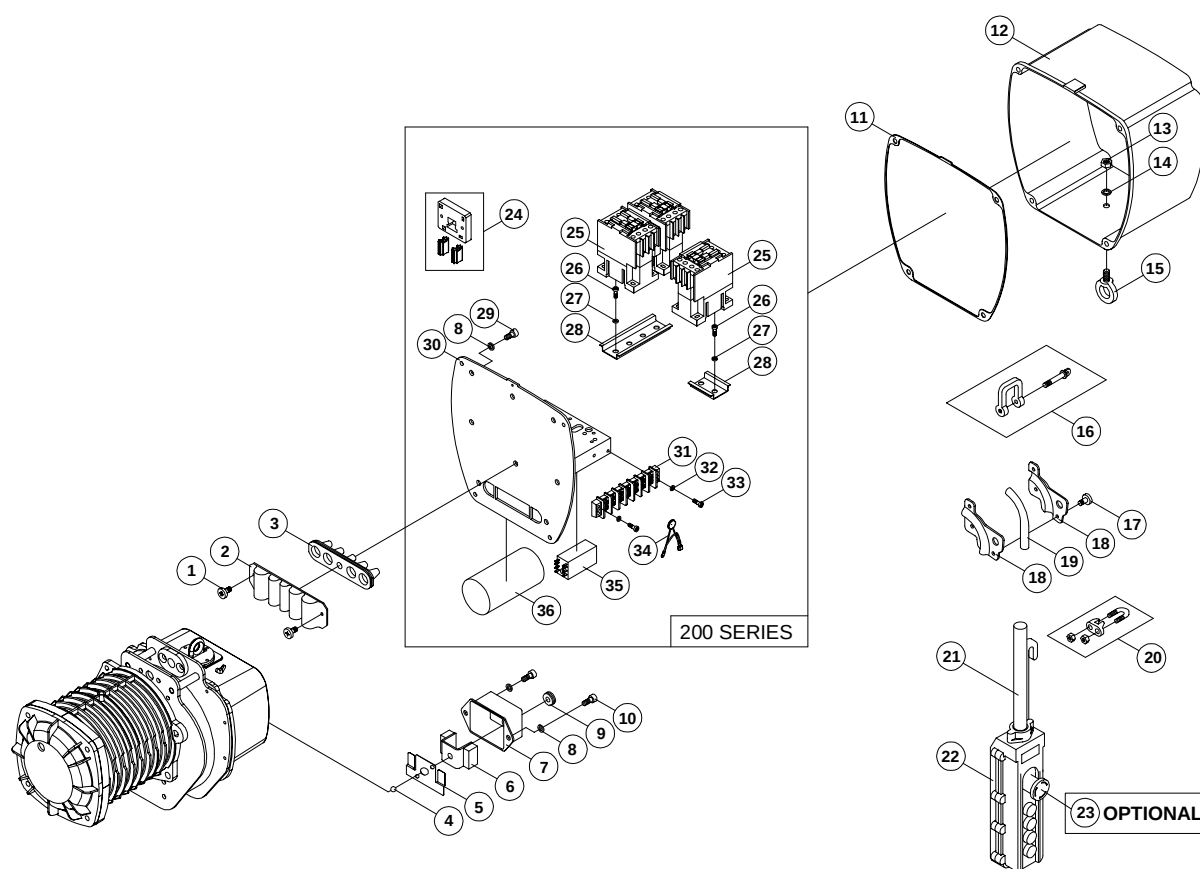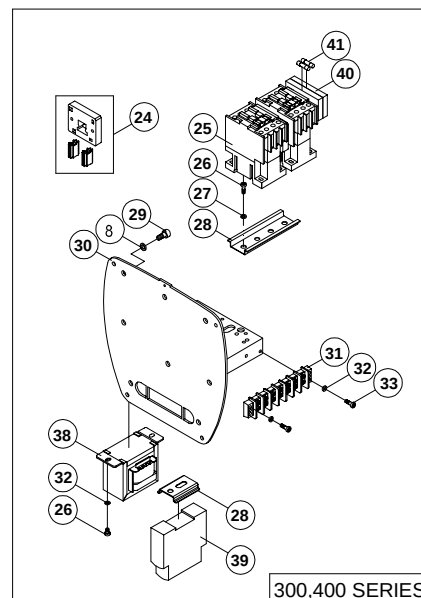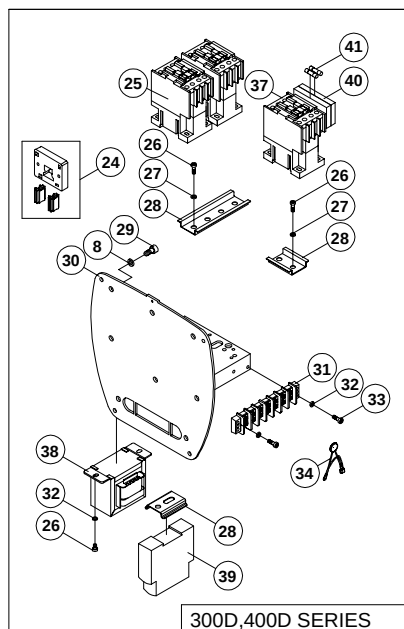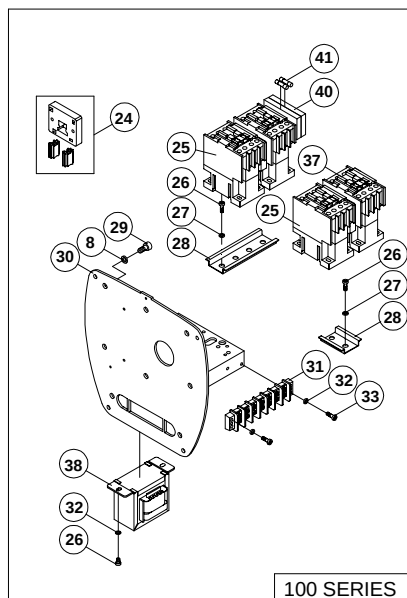

VII – 5 ELECTRIC PARTS(Standard)

D : DUAL SPEED

KEY NO.	PARTS CODE	DESCRIPTION	Q'TY REQ'D EACH UNIT													
			100 380V/48V			200 50HZ/220V			300 380V/48V				400 380V/48V			
			1/2	1	2	1/2	1	2	1/2	1	2	3	1/2	1	2	3
1	400053	Cross Headed Screw <M5×0.8×12L>	2,2D			2			2,2D				2,2D			
2	300341	Wire Holder	1,1D			1			1,1D				1,1D			
3	400268	Wire Holder Rubber Cap	1,1D			1			1,1D				1,1D			
4	400276	Carbon Steel Ball				2			2,2D				2,2D			
5	200213	Leaf Spring				1			1				1			
6	302602	Limit Switch Ass'y				1			1,1D				1,1D			
7	300352	Limit Switch Cover				1			1,1D				1,1D			
8	400094	Spring Washer<M6>	6,6D			8			8,8D				8,8D			
9	400269	Rubber Cap				1			1,1D				1,1D			
10	400004	Hex. Recess Bolt <M6x1.0x8L>				2			2,2D				2,2D			
11	402526	Gasket 26#	1,1D			1			1,1D				1,1D			
12	300763	Electric Comp Oneness Casing	1,1D			1			1,1D				1,1D			
13	400081	Hex. Nut<M8×1.25>	1,1D			1			1,1D				1,1D			
14	400095	Spring Washer<M8>	1,1D			1			1,1D				1,1D			
15	400217	Eye Bolt	1,1D			1			1,1D				1,1D			
16	400275	Shackle	1,1D			1			1,1D				1,1D			
17	400055	Cross Headed Bolt <M6×1.0×12L>	3,3D			3			3,3D				3,3D			
18	300344	Power Cable Holder(Left)	1,1D			1			1,1D				1,1D			
	300345	Power Cable Holder(Right)	1,1D			1			1,1D				1,1D			
19	301253	Power Cable	3M			3M			3M				3M			
20	400297	Wire Clip<3/16">	1,1D			1			1,1D				1,1D			
21		Pendant Cable With Wire Rope "Built In"	1,1D			1			1,1D				1,1D			
22		Push Button Switch(Direct)	1													
		Push Button Switch(Indirect)				1			1				1			
		Push Button Switch(Dual speed)	1D						1D				1D			
23	300576	Emergency Stop	1			1			1				1			
24	300800	Mechanical Interlock	1,1D			1			1, 1D				1,1D			

※For others voltage please contact with dealer for correct part no.


VII – 5 ELECTRIC PARTS (Standard)

D : DUAL SPEED

NO.	PARTS CODE	DESCRIPTION	Q'TY REQ'D EACH UNIT															
			100 380V/48V			200 50HZ/220V			300 380V/48V				400 380V/48V					
			1/2	1	2	1/2	1	2	1/2	1	2	3	1/2	1	2	3		
25	301101	Magnetic Contactor(3A1a1b)	3,3D						2,2D				2,2D					
	301113	Magnetic Contactor(220V 4A)				3												
26	400048	Cross Headed Bolt <M4×0.7×6L>	10,12D			8			10,12D				10,12D					
27	400661	Flat Washer	4D			4			4,4D				4,4D					
28	300079	Contactor Rail(2PC)	1,1D			1			1,1D				1,1D					
	300078	Contactor Rail(1PC)	1,2D			1			1,2D				1,2D					
29	400005	Hex. Recess Bolt <M6×1.0×12L>	6,6D			6			6,6D				6,6D					
30	300359	Components Front Plate(Standard)	1															
	300358	Components Front Plate				1			1,1D				1,1D					
	300371		1,1D															
31	300228	Terminal Block	2,2D			2			2,2D				2,2D					
32	400092	Spring Washer<M4>	6,8D			4			6,8D				6,8D					
33	400051	Cross Headed Bolt <M4×0.7×12L>	2,6D			4			4,6D				4,6D					
34	300143	Rectifier Ass'y	1D			1			1D				1D					
35	301589	Timer For Motor Staring				1												
36	300087	Capacitor				1												
37	300036	Magnetic Contactor(2A2B)	1D						1D				1D					
38	301003	Transformer	1,1D						1,1D				1,1D					
39	302376	Negative Phase Protector (N.P.P)							1,1D				1,1D					
40	300995	Fuse Holder	2						2				2					
41	300993	Fuse	2						2				2					

※For others voltage please contact with dealer for correct part no.

VII-6 LOW HEADROOM MODEL'S TROLLEY EXPLOSION

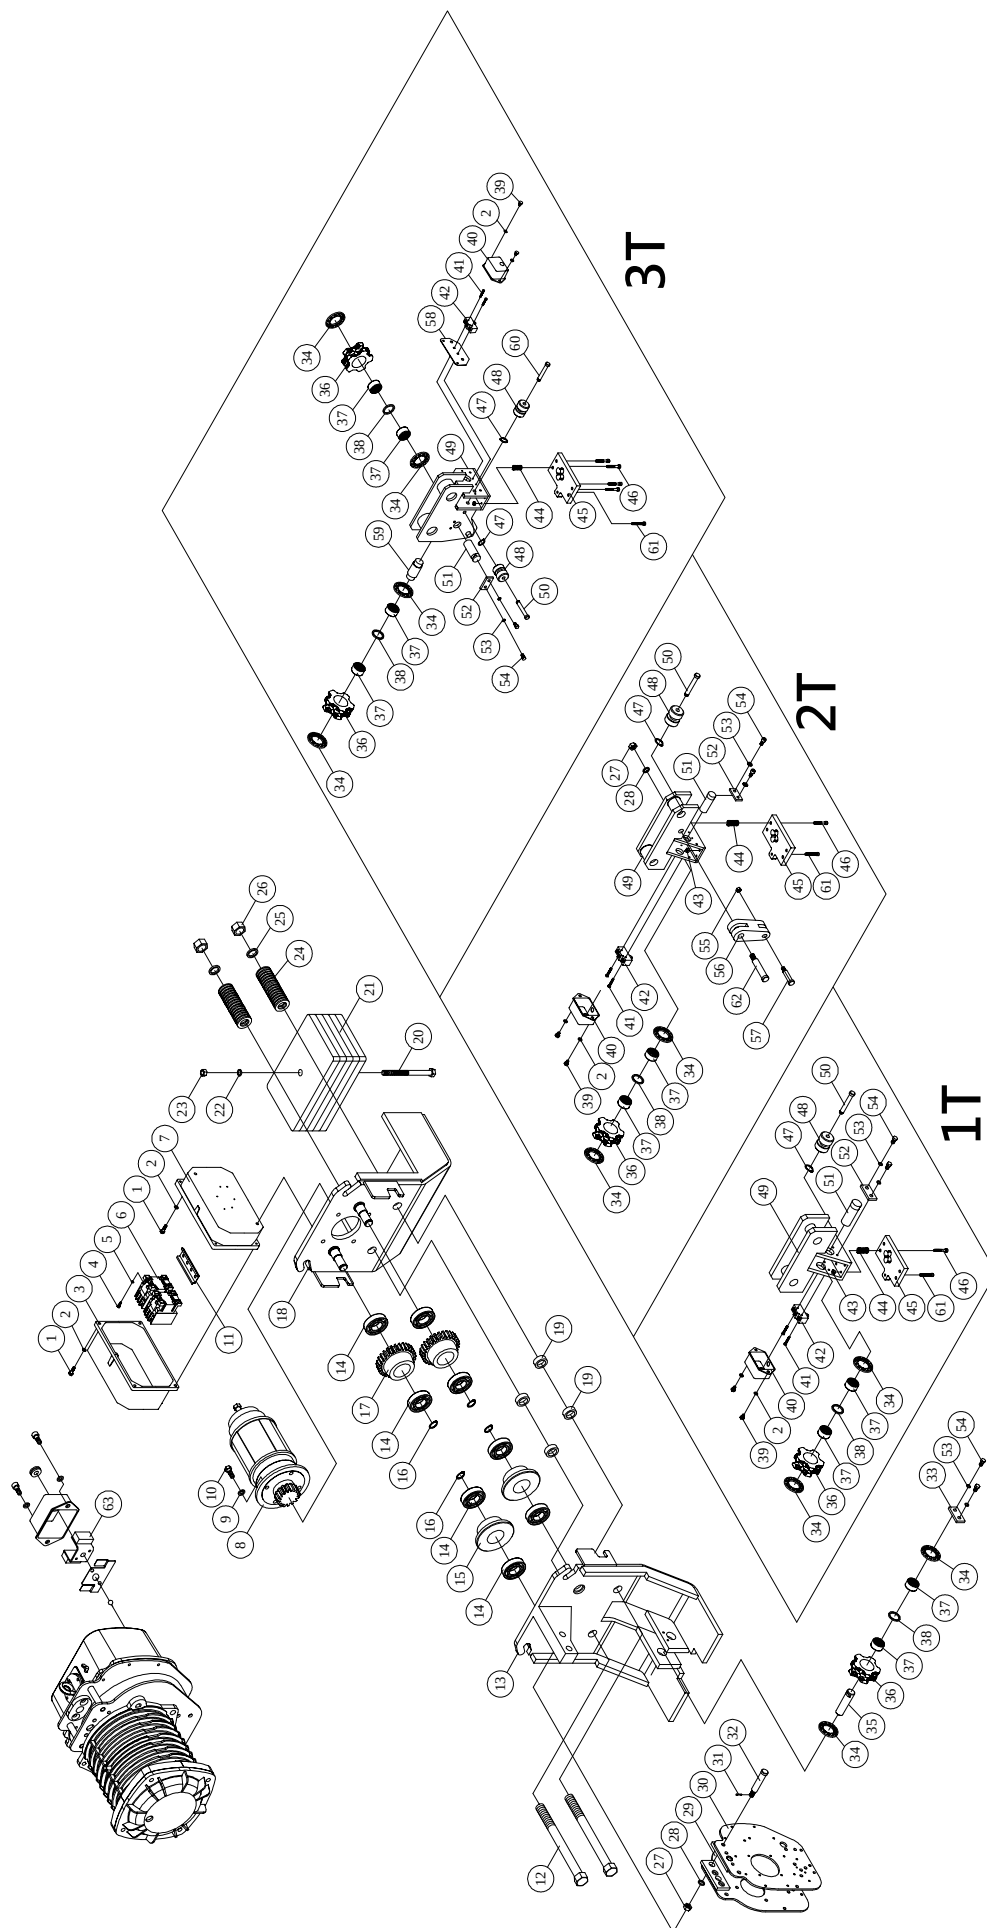

VII – 6 LOW HEADROOM MODEL'S TROLLEY

D:DUAL SPEED

KEY NO.	PARTS CODE	DESCRIPTION	Q'TY REQ'D EACH UNIT											
			100(D)				300(D)				400(D)			
			1/2	1	2	3	1/2	1	2	3	1/2	1	2	3
1	400006	Hex. Recess Bolt <M6×1.0×16L>	6				6				6			
2	400094	Spring Washer <M6>	12				12				12			
3	300394B	Electric Components Casing Cover	1				1				1			
4	400048	Cross Headed Screw <M4×0.7×6L>	3				3				3			
5	400661	Flat Washer <M4>	2				2				2			
6		Magnetic Contactor	2				2				2			
7	300782B	Electric Components Casing	1				1				1			
	300415B		1D				1D				1D			
8		Reducing Gear Motor For Trolley	1				1				1			
9	400096	Spring Washer <M10>	4				4				4			
10	400046	Hex. Headed Bolt <M10×1.5×25L>	4				4				4			
11	300079	Contactor Rail(2PC)	1				1				1			
12	400491	Hex. Headed Bolt <7/8"×9UNC×10"L>	2	2			2	2			2	2		
	400498	Hex. Headed Bolt <1"×8UNC×12"L>			2				2				2	
	400493	Hex. Headed Bolt <11/4"×7UNC×13"L>				2				2				2
13	202898B	Hoist Mounting Side Plate	1	1			1	1			1	1		
	202899B				1				1				1	
	202764B					1				1				1
14	407835	Bearing <6204Z>	8	8			8	8			8	8		
	407830	Bearing <6205 Z>			8				8				8	
	407824	Bearing <6206 Z>				8				8				8
15	203131	Universal Plain Wheel	2	2			2	2			2	2		
	203132				2				2				2	
	203133					2				2				2
16	400191	Retaining Ring <S-20>	4	4			4	4			4	4		
	400192	Retaining Ring <S-25>			4				4				4	
	400193	Retaining Ring <S-30>				4				4				4
17	203111	Universal Gear Wheel	2	2			2	2			2	2		
	203112				2				2				2	
	203113					2				2				2

VII – 6 LOW HEADROOM MODEL'S TROLLEY

D:DUAL SPEED

KEY NO.	PARTS CODE	DESCRIPTION	Q'TY REQ'D EACH UNIT											
			100(D)				300(D)				400(D)			
			1/2	1	2	3	1/2	1	2	3	1/2	1	2	3
18	202861B	Trolley Motor End Side Plate	1	1			1	1			1	1		
	202862B				1				1				1	
	202765B					1				1				1
19	205591	Spacer Tube	4	4			4	4			4	4		
	205592				4				4				4	
	205594					4				4				4
20	408584	Hex. Bolt <M12×1.75×170L>	1				1				1			
21	207402	Counter Weight Block	5				5				5			
22	400663	Flat Washer <M12>	4				4				4			
23	400091	Lock Nut <M12×1.75>	1				1				1			
24	203221	Spacer Washer	32	32			32	32			32	32		
	203222				32				32				32	
	203223					32				32				32
25	400102	Spring Washer <7/8">	4	4			4	4			4	4		
	400103	Spring Washer <1">			2				2				2	
	400105	Spring Washer <11/4">				2				2				2
26	400070	Hex. Nut <1/8"×9UNC>	2	2			2	2			2	2		
	400071	Hex. Nut <1"×8UNC>			2				2				2	
	400072	Hex. Nut <11/4"×7UNC>				2				2				2
27	400084	Hex. Nut <M12×1.75>	2	2	3	2	2	2	3	2	2	2	3	2
28	400097	Spring Washer <M12>	2	2	3	2	2	2	3	2	2	2	3	2
29	100382	Motor Front Plate	1				1				1			
30	200041	Gear Box End Plate	1				1				1			
31	400603	Cotter Pin <3/32"×1"L>	2	2	3	2	2	2	3	2	2	2	3	2
32	202857	Lock Pin	2	2	2	2	2	2	2	2	2	2	2	2
33	217118	Lock Pin			1				1				1	
34	400176	Needle Bearing <AXK/2AS 2542>	4	4	4	6	4	4	4	6	4	4	4	6
35	217355	Sprocket Axle	1				1				1			
36	200109	Sprocket	2	2	2	3	2	2	2	3	2	2	2	3

VII – 6 LOW HEADROOM MODEL'S TROLLEY

D:DUAL SPEED

KEY NO.	PARTS CODE	DESCRIPTION	Q'TY REQ'D EACH UNIT											
			100(D)				300(D)				400(D)			
			1/2	1	2	3	1/2	1	2	3	1/2	1	2	3
37	400170	Needle Bearing <NK 25/16>	4	4	4	6	4	4	4	6	4	4	4	6
38	200354	Sprocket Spacer	2	2	2	3	2	2	2	3	2	2	2	3
39	400004	Hex. Recess Bolt <M6×1.0×8L>	1				1				1			
40	300353	Limit Switch Box	1				1				1			
41	400617	Cross Headed Screw <M4×0.7×25L>	2				2				2			
42	300532	Limit Switch <A-20GD-B>	1				1				1			
43	400087	Lock Nut <M6×1.0>	4				4				4			
44	400340	Spring	4				4				4			
45	203030	Limit Plate	1				1				1			
46	400009	Hex. Recess Bolt <M6×1.0×35L>	4				4				4			
47	400188	Retaining Ring <S-10>	1				1				1			
48	200189	Chain Pressing Roller	1	1	1	2	1	1	1	2	1	1	1	2
49	203014	Load Plate Ass'y	1	1			1	1			1	1		
	203044				1				1				1	
	202766					1				1				1
50	200356	Pressing Roller Axle	1				1				1			
51	200355	Sprocket Axle	1				1				1			
52	200636	Stopper Plate	2				2				2			
53	400095	Spring Washer <M8>	4				4				4			
54	400011	Hex. Recess Bolt <M8×1.25×12L>	4				4				4			
55	400088	Lock Nut <M8×1.25>			1				1				1	
56	200184	Chain Fixer			1				1				1	
57	200176	Chain Fixing Pin			1				1				1	
58	200350	Shaft Stopper				1				1				1
59	203307	Sprocket Axle A				1				1				1
60	203308	Pressing Roller Axle A				1				1				1
61	400422	Hex. Recess Bolt <M6×1.0×35L>	1				1				1			
62	217118	Lock Pin			1				1				1	
63	302601	Limit Switch Ass'y	-				1				1			



Attestation of Conformity

No. M8A 004703 0018 Rev. 00

Holder of Certificate: CHENG DAY MACHINERY WORKS CO., LTD.

No.173, Wen Chiu Rd.
 Dajia Dist.
 437 Taichung City
 TAIWAN

**Product: Lifting equipment
 Electric Chain Hoist**

This Attestation of Conformity is issued on a voluntary basis according to Council Directive 2006/42/EC relating to machinery. It confirms that the listed equipment (not Annex IV equipment) complies with the principal protection requirements of the directive. It refers only to the sample submitted to TÜV SÜD Product Service GmbH for testing and certification. For details see: www.tuvsud.com/ps-cert

Test report no.: 615202002401

Date, 2021-03-18

Li Taiwei
 (Taiwei LI)

Page 1 of 5

After preparation of the necessary technical documentation as well as the EC declaration of conformity the required CE marking can be affixed on the product. Other relevant directives have to be observed.

TÜV SÜD Product Service GmbH • Certification Body • Ridlerstraße 65 • 80339 Munich • Germany

TUV®



Attestation of Conformity

No. M8A 004703 0018 Rev. 00

Model(s):

U Series

UH-105, UH-110, UH-120, UH-130, UH-205, UH-210,
 UH-220, UH-230, UH-305, UH-310, UH-320, UH-330,
 UH-405, UH-410, UH-420, UH-430;
 UHD-105, UHD-110, UHD-120, UHD-130, UHD-305,
 UHD-310, UHD-320, UHD-330, UHD-405, UHD-410,
 UHD-420, UHD-430;
 UHV-105, UHV-110, UHV-120, UHV-130, UHV-305,
 UHV-310, UHV-320, UHV-330, UHV-405, UHV-410,
 UHV-420, UHV-430;
 ULH-105, ULH-110, ULH-120, ULH-130, ULH-305,
 ULH-310, ULH-320, ULH-330, ULH-405, ULH-410,
 ULH-420, ULH-430;
 ULHD-105, ULHD-110, ULHD-120, ULHD-130,
 ULHD-305, ULHD-310, ULHD-320, ULHD-330,
 ULHD-405, ULHD-410, ULHD-420, ULHD-430;
 ULHV-105, ULHV-110, ULHV-120, ULHV-130,
 ULHV-305, ULHV-310, ULHV-320, ULHV-330,
 ULHV-405, ULHV-410, ULHV-420, ULHV-430;
 ULHU-310, ULHU-320, ULHU-410, ULHU-420,
 ULHU-110, ULHU-120;
 ULHUD-310, ULHUD-320, ULHUD-410, ULHUD-420,
 ULHUD-110, ULHUD-120;
 ULHUV-310, ULHUV-320, ULHUV-410, ULHUV-420,
 ULHUV-110, ULHUV-120;
 UH-520, UH-525, UH-528, UH-530, UH-550, UH-575,
 UH-5100, UH-5150, UH-5200, UH-5300, UH-5500;
 UHD-520, UHD-525, UHD-528, UHD-530, UHD-550,
 UHD-575, UHD-5100, UHD-5150, UHD-5200, UHD-5300,
 UHD-5500;
 UHV-520, UHV-525, UHV-528, UHV-530, UHV-550,
 UHV-575, UHV-5100, UHV-5150, UHV-5200, UHV-5300,
 UHV-5500;
 ULH-520, ULH-525, ULH-528, ULH-530, ULH-550;
 ULHD-520, ULHD-525, ULHD-528, ULHD-530, ULHD-550;
 ULHV-520, ULHV-525, ULHV-528, ULHV-530, ULHV-550;
 ULHU-528, ULHU-530, ULHU-550;
 ULHUD-528, ULHUD-530, ULHUD-550;

Page 2 of 5

After preparation of the necessary technical documentation as well as the EC declaration of conformity the required CE marking can be affixed on the product. Other relevant directives have to be observed.

TÜV SÜD Product Service GmbH • Certification Body • Ridlerstraße 65 • 80339 Munich • Germany





Attestation of Conformity

No. M8A 004703 0018 Rev. 00

Model(s):

TWUH-520, TWUH-525, TWUH-528, TWUH-530, TWUH-550;
 TWUHD-520, TWUHD-525, TWUHD-528,
 TWUHD-530, TWUHD-550;
 TWUHV-520, TWUHV-525, TWUHV-528,
 TWUHV-530, TWUHV-550;
 UT-310, UT-320, UT-330, UT-350, UT-375, UT-3100,
 UT-3150, UT-3200, UT-3300;
 UTD-310, UTD-320, UTD-330, UTD-350, UTD-375,
 TD-3100, UTD-3150, UTD-3300;
 UTV-310, UTV-320, UTV-330, UTV-350, UTV-375,
 UTV-3100, UTV-3150, UTV-3300;
 UT-210, UT-220, UT-230;
 UST-310, UST-320, UST-330, UST-350, UST-375,
 UST-3100, UST-3150, UST-3200, UST-3300;
 USTD-310, USTD-320, USTD-330, USTD-350,
 USTD-375, USTD-3100, USTD-3150,
 USTD-3200, USTD-3300;
 USTV-310, USTV-320, USTV-330, USTV-350,
 USTV-375, USTV-3100, USTV-3150,
 USTV-3200, USTV-3300;
 UST-210, UST-220, UST-230

Trade name:

U-MEGA



U-MEGA

Page 3 of 5

After preparation of the necessary technical documentation as well as the EC declaration of conformity the required CE marking can be affixed on the product. Other relevant directives have to be observed.

TÜV SÜD Product Service GmbH • Certification Body • Ridlerstraße 65 • 80339 Munich • Germany

TUV®



Attestation of Conformity

No. M8A 004703 0018 Rev. 00

Parameters:

Rated ratings: 230 VAC, 1P+PE, 50 Hz
 (Only UH-2, UT-2, UST-2)
 230/400 VAC, 3P+PE, 50 Hz

Rated power: As below

0.25kW (UTD-310, UTD-320, UTV-310, UTV-320, UT-310, UT-320, UT-210, UT-220, USTD-310, USTD-320, USTV-310, USTV-320, USTS-100, UST-320, UST-210, UST-220)

0.4kW (USTS-330, USTD-330, USTV-330)

0.6kW (UTD-330, UTD-350, UTV-330, UTV-350, UT-330, UT-350, USTD-350, USTV-350, UST-350)

0.9kW (UT-230, UTD-375, UTV-375, UT-375, UST-230, USTD-375, USTV-375, UST-375)

1.5kW (UH-305, UHD-305, UHV-305, UH-310, UHD-310, UHV-310, UH-105, UHD-105, UHV-105, UH-110, UHD-110, UHV-110, UTD-3100, UTV-3100, UT-3100, UTD-3150, UTV-3150, UT-3150)

1.75kW (ULH-305, ULHD-305, ULHV-305, ULH-310, ULHD-310, ULHV-310, ULH-105, ULHD-305, ULHV-305, ULH-110, ULHD-310, ULHV-310)

1.8kW (UH-320, UHD-320, UHV-320, UH-330, UHD-330, UHV-330, UH-405, UHD-405, UHV-405, UH-310, UHD-310, UHV-310, UH-320, UHD-320, UHV-320, UH-330, UHD-330, UHV-330, UH-120, UHD-120, UHV-120, UH-130, UHD-130, UHV-130, UH-210, UH-220, UH-230, USTD-3100, USTV-3100, UST-3100, USTD-3150, USTV-3150, UST-3150)

2.0kW (ULHU-310, ULHUD-310, ULHUV-310, ULHU-110, ULHUD-110, ULHUV-110)

2.05kW (ULH-320, ULHD-320, ULHV-320, ULH-405, ULHD-405, ULHV-405, ULH-410, ULHD-410, ULHV-410, ULH-420, ULHD-420, ULHV-420, ULH-120, ULHD-120, ULHV-120)

2.2kW (UTD-3200, UTV-3200, UT-3200, UTD-3300, UTV-3300, UT-3300)

2.3kW (ULHU-320, ULHUD-320, ULHUV-320, ULHU-410, ULHUD-410, ULHUV-410, ULHU-420, ULHUD-420, ULHUV-420, ULHU-120, ULHUD-120, ULHUV-120)

Page 4 of 5

After preparation of the necessary technical documentation as well as the EC declaration of conformity the required CE marking can be affixed on the product. Other relevant directives have to be observed.

TÜV SÜD Product Service GmbH • Certification Body • Ridlerstraße 65 • 80339 Munich • Germany

TUV®



Attestation of Conformity

No. M8A 004703 0018 Rev. 00

- 2.4kW (ULH-330, ULHD-330, ULHV-330, ULH-430, ULHD-430, ULHV-430, ULH-130, ULHD-130, ULHV-130)
- 3.0kW (USTD-3200, USTV-3200, UST-3200, USTD-3300, USTV-3300, UST-3300)
- 3.7kW (UH-520, UHD-520, UHV-520, UH-525, UHD-525, UHV-525, UH-528, UHD-528, UHV-528, UH-530, UHD-530, UHV-530, UH-550, UHD-550, UHV-550, UH-575, UHD-575, UHV-575)
- 4.3kW (ULH-520, ULHD-520, ULHV-520, ULH-525, ULHD-525, ULHV-525, ULH-528, ULHD-528, ULHV-528, ULH-530, ULHD-530, ULHV-530, ULH-550, ULHD-550, ULHV-550, TWUH-520, TWUHD-520, TWUHV-520, TWUH-525, TWUHD-525, TWUHV-525, TWUH-528, TWUHD-528, TWUHV-528, TWUH-530, TWUHD-530, TWUHV-530, TWUH-550, TWUHD-550, TWUHV-550)
- 4.5kW (ULHU-528, ULHUD-528, ULHUV-528, ULHU-530, ULHUD-530, ULHUV-530, ULHU-550, ULHUD-550, ULHUV-550)
- 7.4kW (UH-5100, UHD-5100, UHV-5100)
- 10.0kW (UH-5150, UHD-5150, UHV-5150, UH-5200, UHD-5200, UHV-5200, UH-5300, UHD-5300, UHV-5300, UH-5500, UHD-5500, UHV-5500)

**Tested
according to:**

EN ISO 12100:2010
EN 60204-32:2008
EN 14492-2:2019

Page 5 of 5

After preparation of the necessary technical documentation as well as the EC declaration of conformity the required CE marking can be affixed on the product. Other relevant directives have to be observed.

TÜV SÜD Product Service GmbH • Certification Body • Ridlerstraße 65 • 80339 Munich • Germany

TUV®



Product Service

Attestation of Conformity

No. N8MA 004703 0019 Rev. 00

Holder of Certificate: **CHENG DAY MACHINERY
WORKS CO., LTD.**

No.173, Wen Chiu Rd.
Dajia Dist.
437 Taichung City
TAIWAN

Product: **Lifting equipment
Electric Chain Hoist**

This Attestation of Conformity confirms that the listed machine complies with the essential electrical safety requirements covered by the directive 2006/42/EC on machinery. These are equivalent to the applying essential protection requirements applicable at the time of issuance as set out in Low Voltage Directive 2014/35/EU relating to electrical equipment designed for use within certain voltage limits. It is issued on a voluntary basis and refers only to the particular sample submitted for testing and certification. For details see: www.tuvsud.com/ps-cert

Test report no.: 615202002401

Date, 2021-03-18

Li Taiwei
(Taiwei LI)

Page 1 of 5

After preparation of the necessary technical documentation as well as the EU declaration of conformity the required CE marking can be affixed on the product. The declaration of conformity is issued under the sole responsibility of the manufacturer. Other relevant EU-directives have to be observed.

TÜV SÜD Product Service GmbH • Certification Body • Ridlerstraße 65 • 80339 Munich • Germany

TÜV®



Attestation of Conformity

No. N8MA 004703 0019 Rev. 00

Model(s):

U Series

UH-105, UH-110, UH-120, UH-130, UH-205, UH-210,
 UH-220, UH-230, UH-305, UH-310, UH-320, UH-330,
 UH-405, UH-410, UH-420, UH-430;
 UHD-105, UHD-110, UHD-120, UHD-130, UHD-305,
 UHD-310, UHD-320, UHD-330, UHD-405, UHD-410,
 UHD-420, UHD-430;
 UHV-105, UHV-110, UHV-120, UHV-130, UHV-305,
 UHV-310, UHV-320, UHV-330, UHV-405, UHV-410,
 UHV-420, UHV-430;
 ULH-105, ULH-110, ULH-120, ULH-130, ULH-305,
 ULH-310, ULH-320, ULH-330, ULH-405, ULH-410,
 ULH-420, ULH-430;
 ULHD-105, ULHD-110, ULHD-120, ULHD-130,
 ULHD-305, ULHD-310, ULHD-320, ULHD-330,
 ULHD-405, ULHD-410, ULHD-420, ULHD-430;
 ULHV-105, ULHV-110, ULHV-120, ULHV-130,
 ULHV-305, ULHV-310, ULHV-320, ULHV-330,
 ULHV-405, ULHV-410, ULHV-420, ULHV-430;
 ULHU-310, ULHU-320, ULHU-410, ULHU-420,
 ULHU-110, ULHU-120;
 ULHUD-310, ULHUD-320, ULHUD-410, ULHUD-420,
 ULHUD-110, ULHUD-120;
 ULHUV-310, ULHUV-320, ULHUV-410, ULHUV-420,
 ULHUV-110, ULHUV-120;
 UH-520, UH-525, UH-528, UH-530, UH-550, UH-575,
 UH-5100, UH-5150, UH-5200, UH-5300, UH-5500;
 UHD-520, UHD-525, UHD-528, UHD-530, UHD-550,
 UHD-575, UHD-5100, UHD-5150, UHD-5200, UHD-5300,
 UHD-5500;
 UHV-520, UHV-525, UHV-528, UHV-530, UHV-550,
 UHV-575, UHV-5100, UHV-5150, UHV-5200, UHV-5300,
 UHV-5500;
 ULH-520, ULH-525, ULH-528, ULH-530, ULH-550;
 ULHD-520, ULHD-525, ULHD-528, ULHD-530, ULHD-550;
 ULHV-520, ULHV-525, ULHV-528, ULHV-530, ULHV-550;
 ULHU-528, ULHU-530, ULHU-550;
 ULHUD-528, ULHUD-530, ULHUD-550;

Page 2 of 5

After preparation of the necessary technical documentation as well as the EU declaration of conformity the required CE marking can be affixed on the product. The declaration of conformity is issued under the sole responsibility of the manufacturer. Other relevant EU-directives have to be observed.

TÜV SÜD Product Service GmbH • Certification Body • Ridlerstraße 65 • 80339 Munich • Germany

TUV®



Attestation of Conformity

No. N8MA 004703 0019 Rev. 00

Model(s):

TWUH-520, TWUH-525, TWUH-528,
 TWUH-530, TWUH-550;
 TWUHD-520, TWUHD-525, TWUHD-528,
 TWUHD-530, TWUHD-550;
 TWUHV-520, TWUHV-525, TWUHV-528,
 TWUHV-530, TWUHV-550;
 UT-310, UT-320, UT-330, UT-350, UT-375, UT-3100,
 UT-3150, UT-3200, UT-3300;
 UTD-310, UTD-320, UTD-330, UTD-350, UTD-375,
 UTD-3100, UTD-3150, UTD-3300;
 UTV-310, UTV-320, UTV-330, UTV-350, UTV-375,
 UTV-3100, UTV-3150, UTV-3300;
 UT-210, UT-220, UT-230;
 UST-310, UST-320, UST-330, UST-350, UST-375,
 UST-3100, UST-3150, UST-3200, UST-3300;
 USTD-310, USTD-320, USTD-330, USTD-350,
 USTD-375, USTD-3100, USTD-3150,
 USTD-3200, USTD-3300;
 USTV-310, USTV-320, USTV-330, USTV-350,
 USTV-375, USTV-3100, USTV-3150,
 USTV-3200, USTV-3300;
 UST-210, UST-220, UST-230

Brand:

U-MEGA



U-MEGA

Page 3 of 5

After preparation of the necessary technical documentation as well as the EU declaration of conformity the required CE marking can be affixed on the product. The declaration of conformity is issued under the sole responsibility of the manufacturer. Other relevant EU-directives have to be observed.

TÜV SÜD Product Service GmbH • Certification Body • Ridlerstraße 65 • 80339 Munich • Germany





Attestation of Conformity

No. N8MA 004703 0019 Rev. 00

Parameters:

Rated ratings: 230 VAC, 1P+PE, 50 Hz
 (Only UH-2, UT-2, UST-2)
 230/400 VAC, 3P+PE, 50 Hz
 Rated power: As below
 0.25kW (UTD-310, UTD-320, UTV-310, UTV-320, UT-310, UT-320,
 UT-210, UT-220, USTD-310, USTD-320, USTV-310,
 USTV-320, USTS-100, UST-320, UST-210, UST-220)
 0.4kW (USTS-330, USTD-330, USTV-330)
 0.6kW (UTD-330, UTD-350, UTV-330, UTV-350, UT-330,
 UT-350, USTD-350, USTV-350, UST-350)
 0.9kW (UT-230, UTD-375, UTV-375, UT-375, UST-230,
 USTD-375, USTV-375, UST-375)
 1.5kW (UH-305, UHD-305, UHV-305, UH-310, UHD-310, UHV-310,
 UH-105, UHD-105, UHV-105, UH-110, UHD-110, UHV-110,
 UTD-3100, UTV-3100, UT-3100, UTD-3150, UTV-3150,
 UT-3150)
 1.75kW (ULH-305, ULHD-305, ULHV-305, ULH-310, ULHD-310,
 ULHV-310, ULH-105, ULHD-305, ULHV-305,
 ULH-110, ULHD-310, ULHV-310)
 1.8kW (UH-320, UHD-320, UHV-320, UH-330, UHD-330, UHV-330,
 UH-405, UHD-405, UHV-405, UH-310, UHD-310, UHV-310,
 UH-320, UHD-320, UHV-320, UH-330, UHD-330, UHV-330,
 UH-120, UHD-120, UHV-120, UH-130, UHD-130, UHV-130,
 UH-210, UH-220, UH-230, USTD-3100, USTV-3100,
 UST-3100, USTD-3150, USTV-3150, UST-3150)
 2.0kW (ULHU-310, ULHUD-310, ULHUV-310, ULHU-110,
 ULHUD-110, ULHUV-110)
 2.05kW (ULH-320, ULHD-320, ULHV-320, ULH-405, ULHD-405,
 ULHV-405, ULH-410, ULHD-410, ULHV-410, ULH-420,
 ULHD-420, ULHV-420, ULH-120, ULHD-120, ULHV-120)
 2.2kW (UTD-3200, UTV-3200, UT-3200, UTD-3300,
 UTV-3300, UT-3300)
 2.3kW (ULHU-320, ULHUD-320, ULHUV-320, ULHU-410,
 ULHUD-410, ULHUV-410, ULHU-420, ULHUD-420,
 ULHUV-420, ULHU-120, ULHUD-120, ULHUV-120)

Page 4 of 5

After preparation of the necessary technical documentation as well as the EU declaration of conformity the required CE marking can be affixed on the product. The declaration of conformity is issued under the sole responsibility of the manufacturer. Other relevant EU-directives have to be observed.

TÜV SÜD Product Service GmbH • Certification Body • Ridlerstraße 65 • 80339 Munich • Germany

TUV®



Product Service

Attestation of Conformity

No. N8MA 004703 0019 Rev. 00

2.4kW (ULH-330, ULHD-330, ULHV-330, ULH-430, ULHD-430, ULHV-430, ULH-130, ULHD-130, ULHV-130)

3.0kW (USTD-3200, USTV-3200, UST-3200, USTD-3300, USTV-3300, UST-3300)

3.7kW (UH-520, UHD-520, UHV-520, UH-525, UHD-525, UHV-525, UH-528, UHD-528, UHV-528, UH-530, UHD-530, UHV-530, UH-550, UHD-550, UHV-550, UH-575, UHD-575, UHV-575)

4.3kW (ULH-520, ULHD-520, ULHV-520, ULH-525, ULHD-525, ULHV-525, ULH-528, ULHD-528, ULHV-528, ULH-530, ULHD-530, ULHV-530, ULH-550, ULHD-550, ULHV-550, TWUH-520, TWUHD-520, TWUHV-520, TWUH-525, TWUHD-525, TWUHV-525, TWUH-528, TWUHD-528, TWUHV-528, TWUH-530, TWUHD-530, TWUHV-530, TWUH-550, TWUHD-550, TWUHV-550)

4.5kW (ULHU-528, ULHUD-528, ULHUV-528, ULHU-530, ULHUD-530, ULHUV-530, ULHU-550, ULHUD-550, ULHUV-550)

7.4kW (UH-5100, UHD-5100, UHV-5100)

10.0kW (UH-5150, UHD-5150, UHV-5150, UH-5200, UHD-5200, UHV-5200, UH-5300, UHD-5300, UHV-5300, UH-5500, UHD-5500, UHV-5500)

**Tested
according to:**

EN ISO 12100:2010
EN 60204-32:2008
EN 14492-2:2019

Page 5 of 5

After preparation of the necessary technical documentation as well as the EU declaration of conformity the required CE marking can be affixed on the product. The declaration of conformity is issued under the sole responsibility of the manufacturer. Other relevant EU-directives have to be observed.

TÜV SÜD Product Service GmbH • Certification Body • Ridlerstraße 65 • 80339 Munich • Germany

TÜV®

10.Oil Quality Table

For Load Chain / All Model						
Model	Lubricate Mothod	Lubricant Adding		Lubricant Changing		Q'ty
		Period	Q'ty / c.c.	Perild	Q'ty / c.c.	
All Model	Smear oil on load chain surface	Weekly	-	-	-	ISO VG460
For Gear Box						
	Soak in oil	Monthly	Suitable	Annual	700 ~ 800	ISO VG460
300-050	Soak in oil	Monthly	Suitable	Annual	700 ~ 800	ISO VG460
300D-050	Soak in oil	Monthly	Suitable	Annual	700 ~ 800	ISO VG460
100-050, 100, 200	Soak in oil	Monthly	Suitable	Annual	700 ~ 800	ISO VG460
100D-050,100-200	Soak in oil	Monthly	Suitable	Annual	700 ~ 800	ISO VG460
300-100, 200, 300	Soak in oil	Monthly	Suitable	Annual	700 ~ 800	ISO VG460
300D-100, 200, 300	Soak in oil	Monthly	Suitable	Annual	700 ~ 800	ISO VG460
400-050,100-200,300	Soak in oil	Monthly	Suitable	Annual	700 ~ 800	ISO VG460
400D-050, 100, 200, 300	Soak in oil	Monthly	Suitable	Annual	700 ~ 800	ISO VG460
200-100, 200	Soak in oil	Monthly	Suitable	Annual	700 ~ 800	ISO VG460